

CASIO®

E

Module No. 5110



User's Guide
Bedienungsanleitung
Mode d'emploi
Guía del usuario
Guida dell'utilizzatore



 
Getting Acquainted

Congratulations upon your selection of this CASIO watch. To get the most out of your purchase, be sure to read this manual carefully.

- Be sure to keep all user documentation handy for future reference.

Keep the watch exposed to bright light

Bright Light



The electricity generated by the solar panel of the watch is stored by a built-in battery. Leaving or using the watch where it is not exposed to light causes the battery to run down. Make sure the watch is exposed to light as much as possible.

 
- When you are not wearing the watch on your wrist, position the face so it is pointed at a source of bright light.
- You should try to keep the watch outside of your sleeve as much as possible. Charging is reduced significantly if the face is even only partially covered.



- The watch continues to operate, even when it is not exposed to light. Leaving the watch in the dark can cause the battery to run down, which will result in some watch functions to be disabled. If the battery goes dead, you will have to re-configure watch settings after recharging. To ensure normal watch operation, be sure to keep it exposed to light as much as possible.

Battery charges in the light.

Battery discharges in the dark.

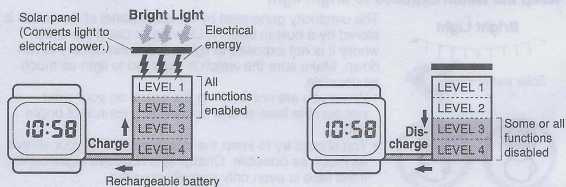

- The actual level at which some functions are disabled depends on the watch model.
- Frequent display illumination can run down the battery quickly and require charging. The following guidelines give an idea of the charging time required to recover from a single illumination operation.

Approximately 5 minutes exposure to bright sunlight coming in through a window

Approximately about 8 hours exposure to indoor fluorescent lighting

- **Be sure to read "Power Supply" (page E-49) for important information you need to know when exposing the watch to bright light.**

 
If the display of the watch is blank...

If the display of the watch is blank, it means that the watch's Power Saving function has turned off the display to conserve power.

- **See "Power Saving Function" (page E-66) for more information.**

Note that CASIO COMPUTER CO., LTD. assumes no responsibility for any damage or loss suffered by you or any third party arising through the use of your watch or its malfunction.

About This Manual

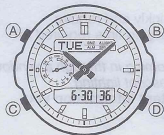


- Depending on the model of your watch, display text appears either as dark figures on a light background or light figures on a dark background. All sample displays in this manual are shown using dark figures on a light background.

- Button operations are indicated using the letters shown in the illustration.

- Each section of this manual provides you with the information you need to perform operations in each mode. Further details and technical information can be found in the "Reference" section.

 - To ensure that this watch provides you with the years of service for which it is designed, carefully read and follow the instructions under "Operating Precautions" and "User Maintenance."

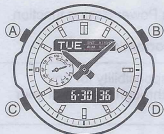

Contents

General Guide	E-8
Radio-controlled Atomic Timekeeping	E-10
<i>To specify your Home City</i>	E-12
<i>To perform manual receive</i>	E-24
<i>To check the latest signal reception results</i>	E-26
World Time	E-29
<i>To view the current time in another time zone</i>	E-31
<i>To toggle a city code time between Standard Time and Daylight Saving Time</i>	E-32
<i>To swap your Home City and World Time City</i>	E-33
Stopwatch	E-34
<i>To measure times with the stopwatch</i>	E-35

Countdown Timer	E-36
<i>To use the countdown timer</i>	<i>E-37</i>
<i>To configure countdown start time and auto-repeat settings</i>	<i>E-38</i>
Alarms	E-40
<i>To set an alarm time</i>	<i>E-41</i>
<i>To turn an alarm on and off</i>	<i>E-43</i>
<i>To turn the Hourly Time Signal on and off</i>	<i>E-44</i>
Illumination	E-45
<i>To illuminate the display manually</i>	<i>E-45</i>
<i>To turn the auto light switch on and off</i>	<i>E-48</i>
Power Supply	E-49
Timekeeping	E-57
<i>To set the time and date manually</i>	<i>E-58</i>
<i>To change the Daylight Saving Time (summer time) setting</i>	<i>E-63</i>

Hand Home Position Correction	E-64
<i>To adjust the home positions</i>	<i>E-64</i>
Reference	E-66
<i>To recover from the sleep state</i>	<i>E-67</i>
<i>To turn Power Saving on and off</i>	<i>E-68</i>
Specifications	E-75
Operating Precautions	E-78
User Maintenance	E-89



General Guide

- Press **(C)** to change from mode to mode.
- In any mode (except a setting mode), press **(B)** to illuminate the display for about one second.

Timekeeping Mode



Press **(C)**.