

# GT-I8000 user manual



**SAMSUNG**

# Read me first!

When you need information, instructions, and tips to learn more about your device, you have several options available:

- **Help System** (on your device) - your device includes Help. This embedded, searchable help system explains how to use various programs and features.
- **Extended Usage Guide** (online) - on the Samsung website, you will find the Extended Usage Guide in Adobe Acrobat (.pdf) format. You can either view the guide online or download and print the file for your convenience. The Extended Usage Guide contains advanced usage tips and more details about particular functions of your device. To view the file, you must have Adobe Reader or Adobe Acrobat installed-you can download Adobe Reader free from Adobe's website ([www.adobe.com](http://www.adobe.com)).
- **User Manual** (printed) - this user manual has been specially designed to guide you through the functions and features of your device. It contains extensive information about Samsung software and features and tips for using and maintaining the device. For any topics not covered in this manual, please refer to the embedded help as described above.

## Instructional icons

---

Before you start, familiarise yourself with the icons you will see in this manual:



**Warning** – situations that could cause injury to yourself or others



**Caution** – situations that could cause damage to your device or other equipment



**Note** – notes, usage tips, or additional information

 


**Refer to** – pages with related information; for example: ► p. 12 (represents "see page 12")



**Followed by** – the order of options or menus you must select to perform a step; for example: Tap **Start** > **Settings** (represents **Start**, followed by **Settings**)





**Square brackets** – device keys; for example: [>] (represents the End/Power key)

## Copyrights and trademarks

---

Rights to all technologies and products that comprise this device are the property of their respective owners:

- This product includes software licensed from MS, an affiliate of the Microsoft Corporation. Microsoft and software bearing the Microsoft name are registered trademarks of the Microsoft Corporation.
- Java™ is a trademark of Sun Microsystems, Inc.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide. Bluetooth QD ID: B015224
- Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- DivX® is a registered trademark of DivX, Inc., and is used under licence.
-  and  are trademarks of SRS Labs, Inc. CS Headphone and WOW HD technologies are incorporated under licence from SRS Labs, Inc.
- XTRA is a registered trademark of Qualcomm, Inc.

Windows®  
phone



CE0168!

## **ABOUT DIVX VIDEO**

DivX<sup>®</sup> is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into Divx video. DivX Certified to play DivX<sup>®</sup> video up to 320x240.

## **ABOUT DIVX VIDEO-ON-DEMAND**

This DivX Certified<sup>®</sup> device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX VOD.

# Contents

<b>Introducing your device .....</b>	<b>9</b>
Unpack .....	9
Get to know your device .....	10
Assemble and prepare your device .....	15
Turn on your device for first time .....	20
Customise your device .....	25
Use Widgets .....	28
Work with applications .....	32
Enter text .....	35
<b>Communication .....</b>	<b>42</b>
Work with contacts .....	42
Calling .....	47
Messaging .....	50
<b>Multimedia .....</b>	<b>54</b>
Camera .....	54
Media Player .....	65
Photo .....	69

Digital Frame .....	70
FM Radio .....	72
Video Editor .....	74
Games .....	78
Java .....	78
<b>Personal productivity .....</b>	<b>79</b>
ActiveSync .....	79
Smart Sync .....	83
Clock .....	86
Schedule .....	89
Notes .....	91
Memo .....	92
Recorder .....	93
Tasks .....	94
Calculator .....	95
Unit Converter .....	97
Smart Reader .....	98
Smart Search .....	101
<b>Web applications .....</b>	<b>103</b>
Web browsing with Opera .....	103
Rich Internet .....	106

Search Widget .....	106
Streaming Player .....	107
Midomi .....	108
RSS Reader .....	110
Podcast .....	112
QIK .....	115
Communities .....	118
Samsung Application Store .....	121
Marketplace .....	122
Microsoft My Phone .....	122
Remote Desktop Mobile .....	123
<b>Connectivity .....</b>	<b>124</b>
Connect to the internet or your network .....	124
GPS .....	129
Bluetooth .....	132
Wi-Fi .....	137
Connected Home .....	139
<b>Troubleshooting .....</b>	<b>144</b>
<b>Safety and usage information .....</b>	<b>149</b>
<b>Index .....</b>	<b>162</b>



# Introducing your device

## Unpack

Your package contains the following items:

- Handset
- Battery
- Travel adapter (charger)
- CD-ROM\*
- Stereo headset
- PC data cable
- User manual



 
The items supplied with your device and available accessories may be different depending on your region or service provider.

\* The CD-ROM contains Microsoft ActiveSync software, add-on software, and other applications.

# Get to know your device

 
## Front view

---

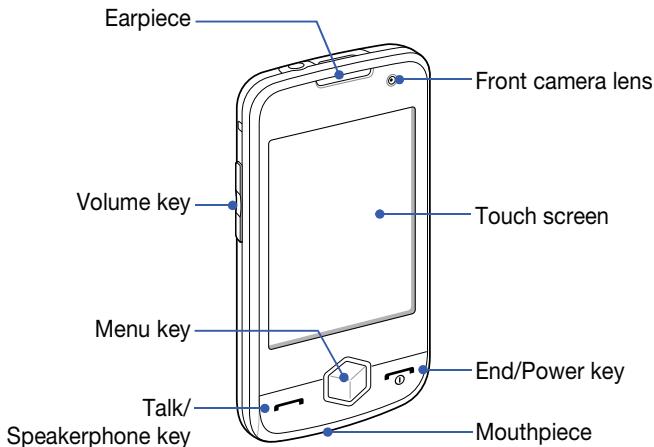





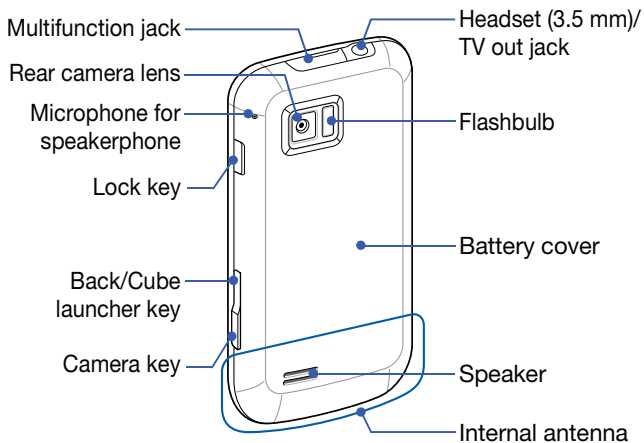

## Rear view


 



 



---






















## Keys



 
 

 
 

 
 
 


Key	Function
	Open the dialling screen; Make or answer a call; Activate the speakerphone during a call (press and hold)
	Access Main menu; Open the Task Switcher screen (press and hold)
	Turn the device on or off (press and hold); End a call; Return to the Today screen
	Adjust the volume; During a call, adjust the voice volume; During an incoming call, mute the call ringer
	Activate or deactivate Sleep mode; Lock or unlock the external keys and the touch screen (press and hold)
	<ul style="list-style-type: none"><li>• <b>Up</b> - Return to the previous menu level; Open the Cube launcher (press and hold)</li><li>• <b>Down</b> - Activate the camera; In Camera mode, take a photo or record a video</li></ul>

## Icons

Icon	Function
	UMTS network available
	UMTS network available (data call unavailable)
	UMTS network connected
	HSDPA network available
	HSDPA network connected
	ActiveSync in progress
	Battery level
	Low battery
	Battery charging

Icon	Function
	Attempt to access via Bluetooth or Bluetooth activated
	Bluetooth visibility activated
	Receiving data via Bluetooth
	Bluetooth stereo headset connected
	Bluetooth hands-free connected
	Call on hold
	Call forwarding activated
	Connected to a computer
	Data call in progress

Icon	Function
	EDGE network available
	EDGE network connected
	GPRS network available
	GPRS network connected
	Searching for a signal
	Missed call
	More status icons available (tap the icon to see them)
	New text message
	New email message
	New multimedia message
	New voice mail message

 
Icon	Function
	No signal
	No SIM or USIM card
	Pending alarm
	Radio off
	Ringer on
	Ringer set to vibrate
	Roaming (outside of normal service area)
	Signal strength
	Synchronisation error
	Urgent notification (tap the icon to see the message)
	Voice call in progress
	Wi-Fi activated
	Wi-Fi data call in progress

# Assemble and prepare your device


Before you can use your device, you must install the SIM or USIM card, install the battery, and charge the battery. Installing a SIM or USIM card is optional, but may be required to fully utilise some applications and store media files.

## Insert the SIM or USIM card and battery

---

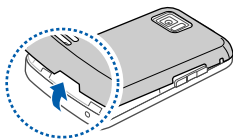


1 Remove the battery cover.

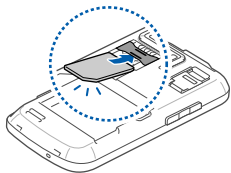 


2 Insert the SIM or USIM card.



 Insert the SIM or USIM card with the gold-coloured contacts facing the device.

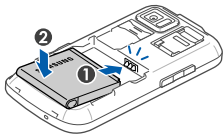


3 Insert the battery.

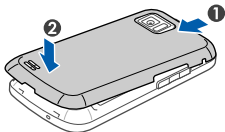 

4 Replace the battery cover.

## Charge battery

 ---

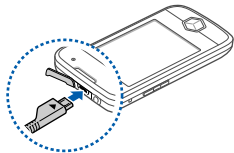

1 Open the cover to the multifunction jack on the top of the device.

2 Plug the small end of the travel adapter into the device.

3 Plug the large end of the travel adapter into a power outlet.



4 When charging is finished, unplug the travel adapter from the power outlet.

5 Remove the travel adapter from the device.



Although a charger cable is connected,

- The battery may not charge in some situations to protect the device.
- The battery level may remain low if the device is using a large amount of power.


## Insert a memory card (optional)

 ---


By inserting a memory card, you can store multimedia files and messages or back up your important information. Your device accepts microSD™ or microSDHC™ memory cards up to 32 GB (depending on memory card manufacturer and type).



Formatting the memory card on a PC may cause incompatibility with your device. Format the memory card only on the device.

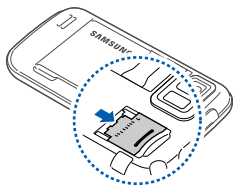


1 Remove the battery cover.

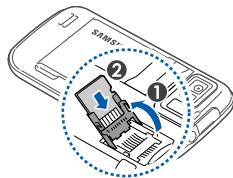 


2 Unlock the memory card holder.

 3 Lift the memory card holder and insert a memory card, as shown.

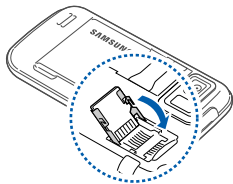

4 Close the memory card holder.

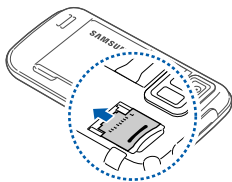 


5 Lock the memory card holder.

6 Replace the battery cover.

## Attach a hand strap (optional)

 ---

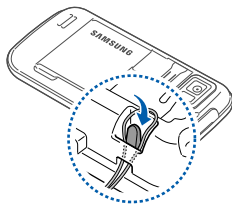


1 Remove the battery cover.

2 Slide a hand strap through the slot and hook it over the small projection.

3 Replace the battery cover.

# Turn on your device for first time

- 1 Press and hold  to turn on your device.
- 2 Follow the on-screen instructions. Your device will automatically connect to the cellular network.

## Activate Sleep mode

---

You can activate Sleep mode to save power when you do not use your device.

To activate Sleep mode, press the Lock key. Your device will turn off the screen. To deactivate Sleep mode, press the Lock key again.

## Lock external keys and touch screen

---



You can lock the external keys and the touch screen to prevent any unwanted device operations from accidentally pressing any of the keys and the screen.

To lock the keys and the screen, press and hold the Lock key. To unlock, press and hold the Lock key again, or tap and hold the lock icon.

## Use the touch screen

---

You can perform the following actions on your device's touch screen:

-  For optimal use of the touch screen, remove the screen protection film before using your device.
- Tap: Touch the screen once to select commands or launch applications.
- Tap-and-hold: Tap and hold an item to see a list of available actions. Tap the action you want to perform on the pop-up menu.
- Drag: Tap-and-hold a scroll bar or text and then drag it to move the bar or select text.
-  If your device does not respond accurately to your screen taps, realign your touch screen. To realign the screen, tap **Start > Settings > Basic Settings** tab > **General Settings > Align Screen > Align screen**.







## Use the Cube launcher

---

The Cube launcher key provides quick access to some applications.



- 1 Press and hold the Cube launcher key to open the Cube launcher.
- 2 Select the shortcut you want by rotating the cube to the appropriate side.
- 3 Tap the icon to launch the application.

The Cube launcher provides shortcuts to the following:

Icon	Function
	Photo album
	Music library
	Video library
	Phonebook
	Games
	Internet

## Disable wireless functions

---

 
- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **General Settings** > **Wireless Manager**.
- 3 Tap  next to **Phone**.
  - Your device will show  on the Today screen.

To enable wireless functions, repeat steps 1-3 above.

## Reset the device

---

If your device freezes or hangs, you may need to close programs or reset the device to regain functionality. If your device is still responsive but a program is frozen, close the program via Task Switcher. ► p. 33

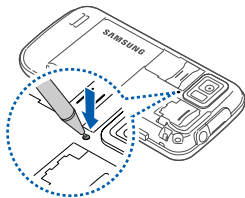

If your device is frozen and unresponsive, remove the battery cover and use a small object, such as a toothpick, to press the reset button.



# Customise your device

Learn to change themes and background images, add or remove items, and adjust the system volume from the Today screen.


## Change your theme or background image

---

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Display and Light**.
- 3 Tap **Theme** or **Wallpaper** and select the desired option to customise the display.
- 4 Tap **Yes** > **No** (if necessary).
- 5 When you are finished, tap **OK** or **Done**.

## Add or remove items on the Today screen

---

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Display and Light**.
- 3 Tap **Items on Today**.
- 4 Tap the check boxes next to each item to add or remove items.
  -  Some items are not compatible with Samsung widgets. If you choose to add **Samsung WidgetPlus**, the only other items that will work simultaneously are **Windows Live** and **Windows Live Search**.
- 5 Tap **Done**.
- 6 When you are finished, tap **OK**.

## Adjust the system volume


---

To adjust the system volume, press the Volume key up or down. To set the device to vibrate, press and hold the Volume key down. To deactivate the vibrate feature, press and hold the Volume key down again.

## Activate Etiquette pause

---

You can temporarily pause the music player or mute event alarms by placing the device face down when Etiquette pause is activated. To activate Etiquette pause,

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Motion Settings** > **Etiquette**.
- 3 Tap  next to **Enable etiquette pause**.
- 4 Tap **Done**.

# Use Widgets

Use widgets on the Today screen. Widgets are user friendly shortcuts to commonly used applications allowing you to customise the Today screen.





## Open the toolbar






 







---


Tap the arrow at the bottom left of the Today screen to open the toolbar. You can rearrange widgets on the toolbar or drag them to the Today screen.



Depending on your region or service provider, available widgets may vary.

Widget	Function
	Synchronise your data via ActiveSync
	View the current time and date
	View the time in other cities or regions
	Get the latest weather updates from AccuWeather*

Widget	Function
	View two upcoming schedules and all schedules for today
	Browse your photos and set a photo as the wallpaper
	Use services from FaceBook*
	Use services from MySpace*
	Use services from YouTube*
	Create and view memos
	Change the current sound profile
	View a new message or missed calls
	Download new widgets from a website*
	View the network connection status
	Monitor your wireless connections
	Get news updates from CNN*
	Get updates from Yahoo! Finance*

Widget	Function
	Search the web with Yahoo!*
	Search the web with Google*
	Listen to music via the mini player
	Listen to the FM radio
	Create and save audio notes

\* These widgets require a connection to the internet, which may result in additional charges.


## Drag the widgets to the Today screen

---

- 1 Open the toolbar.
- 2 Drag a widget from the toolbar to the Today screen. You can position the widget anywhere on the screen.

## Customise widgets

---

- 1 Tap the arrow at the bottom left of the Today screen to open the widget toolbar.
- 2 Tap  at the top of the toolbar.
- 3 Tap the check boxes next to items that you want to appear on the toolbar.
- 4 When you are finished, tap **Done**.

# Work with applications

Learn to open applications or folders and switch between open applications.



## Open applications or folders

---

- 1 Tap **Start** or press the Menu key.
- 2 To open an application, tap the application icon.
- 3 To open a folder, tap **My Files** and navigate to the desired folder.

## Organise applications

---

- 1 Press the Menu key.
- 2 Tap **Edit**.
  - Tap  to move an application to **Others**.
  - Tap  to move an application from **Others**.
  - Scroll left or right to move to one of the Menu mode screens.



- Tap an application icon and move it to the location you want.
- Tap the screen name field to edit the screen name.

3 Tap **Save**.

## Switch applications

---

Your device allows you to multi-task by running multiple applications at the same time.

To switch from one active application to another,

1 Press and hold the Menu key.

- Task Switcher shows thumbnail images of all open programs.


2 Tap a thumbnail to switch to the corresponding application.



## Close applications

---

To send the current application to the background, tap **X** or **OK**.

To close an application,

- 1 Press and hold the Menu key.
- 2 Tap **End**.
- 3 Tap .


If you tap , scroll left or right to an application, and tap  to close it.

## Access the help system

---

To access the help system of your device, tap **Start > Help**.  
The embedded Help system appears.

# Enter text

When you need to enter text, tap the default input panel icon () at the bottom of the screen. Tap the arrow next to the icon and select one of the following input methods for entering text:

 
 
- Block Recognizer
- Keyboard
- Letter Recognizer
- Samsung Keypad
- Transcriber



You can tap the input panel icon at any time to show or hide the input panel.

## Enter text with Block Recognizer

---

Write individual letters and numbers in the writing area in the Palm Graffiti style.



- 1 Tap the input panel icon.
  - 2 Tap the arrow next to the input panel icon and select **Block Recognizer**.
  - 3 Write each character in the writing area at the bottom of the screen:
    - Write letters on the left side of the writing area.
    - Write numbers on the right side of the writing area.
-  Drag your finger upward to change the case (**ABC**, **Abc**, or **abc**). Tap once on the screen to enter symbols (**123** or **abc** will change to the  icon). Drag your finger leftward to delete the last letter. To view demonstrations of how to enter characters, refer to the embedded help system.

## Enter text with the keyboard

---

 
 
 
- 1 Tap the input panel icon.
- 2 Tap the arrow next to the input panel icon and select **Keyboard**.
- 3 Tap characters to enter your text:
  - To switch to numbers and symbols, tap **123**.
  - To access special characters, tap **áü**.


## Enter text with Letter Recognizer

---

Write individual letters and numbers on the touch screen.

- 1 Tap the input panel icon.
- 2 Tap the arrow next to the input panel icon and select **Letter Recognizer**.




- 3 Write each character in the writing area at the bottom of the screen:
    - Write upper-case letters in the **ABC** column on the left side of the writing area.
    - Write lower-case letters in the **abc** column in the middle of the writing area.
    - Write numbers and symbols in the **123** column on the right side of the writing area.
-  To view demonstrations of how to write characters, refer to the embedded help system.

## Enter text with Samsung Keypad

---


- 1 Tap the input panel icon.
- 2 Tap the arrow next to the input panel icon and select **Samsung Keypad**.
- 3 Tap characters to enter your text:
  - To enter the text in T9 mode, tap **Mode** to turn on **xt9**. Tap the appropriate keys to enter an entire word.
  - To enter the text in ABC mode, tap **Mode** to turn off **xt9**. Tap the appropriate key to enter a character.
  - To enter symbols, tap **SYM**.
  - To enter numbers, tap **123**.

 To change the keypad style, tap and hold **Mode**, select a style, and tap **Done**.

When you rotate the device anti-clockwise to the landscape orientation, you can enter text using the landscape QWERTY keyboard.

The following applications support the landscape QWERTY keyboard:

 
E-mail, Message, Word Mobile, Excel Mobile, and Notes

 The applications supporting the landscape QWERTY keyboard may vary depending on your region or service provider.

## Enter text with Transcriber

---



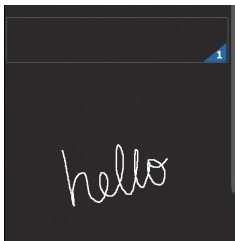






With Transcriber, you can write anywhere on the screen. Unlike Letter Recognizer or Block Recognizer, you can use cursive (joined-up) handwriting to write complete words.



- 1 Tap the input panel icon.
- 2 Tap the arrow next to the input panel icon and select **Transcriber**.
- 3 Write legibly anywhere on the screen.
- 4 Pause and allow Transcriber to convert your writing to text.



You can access the following tools from the Transcriber toolbar:

Tap	To
	Change Transcriber options
	View demonstrations of how to write characters
	Open the list of punctuation marks, symbols, and numbers
	Change the input mode to <b>A</b> , <b>a</b> , or <b>123</b>
<b>spc</b>	Insert a space
	Start a new line
	Move the cursor to the left
	Move the cursor to the right
	Clear your input
	Open the embedded help

# Communication

## Work with contacts

Learn to use contact cards and groups to store personal information, such as names, phone numbers, and addresses.


### Create a new Outlook or SIM contact card

---

- 1 Tap **Start** > **Phonebook**.
- 2 Tap **New** > **Save to outlook** or **Save to SIM**.
- 3 Enter contact information.
- 4 When you are finished entering information, tap **Done** to save the contact card.

## Search for a contact card

---

- 1 Tap **Start** > **Phonebook**.
- 2 Tap .
- 3 Tap a few letters of the contact's name.
  - As you enter letters, the screen will show contacts that match your input.
- 4 Tap a contact to open it.

## Copy or move contact cards

---

To copy or move contact cards from your device's memory to a SIM or USIM card and vice versa,

- 1 Tap **Start** > **Phonebook**.
- 2 To copy contacts, tap **Menu** > **Copy** > a copy option. Refer to step 4.
- 3 To move contacts, tap **Menu** > **Move** > a move option.

- 4 Tap the check boxes next to the contacts that you want to copy or move.
- 5 Tap **Done**.


## Organise your contacts into categories

---

- 1 Tap **Start** > **Phonebook**.
- 2 Tap a contact in the device's memory.
- 3 Tap **Edit**.
- 4 Scroll down and tap the categories field.
- 5 Tap the check boxes next to the desired categories.
- 6 Tap **Done**.
- 7 Tap **Done** to save the contact card.

## Assign a speed dial number to a contact card

---

- 1 Tap **Start** > **Phonebook**.
- 2 Tap .
- 3 Tap **New** and select a contact.
- 4 Select the contact's phone number to use for speed dialling.
- 5 Select a speed dial location.

## Assign a photo to a contact card

---

- 1 Tap **Start** > **Phonebook**.
- 2 Tap a contact in the device's memory.
- 3 Tap **Edit**.
- 4 Tap the photo icon at the top left of the contact card.
- 5 Take a new photo or select a photo.
- 6 Tap **Done** twice to save the contact card.

## Assign a ringtone to a contact card

---





- 1 Tap **Start** > **Phonebook**.
- 2 Tap a contact in the device's memory.
- 3 Tap **Edit**.
- 4 Scroll down and tap **Add field**.
- 5 Scroll down and tap the ringtone field.
- 6 Select a ringtone.
- 7 Tap **Done**.
- 8 Tap **Done** twice to save the contact card.

# Calling

Learn to make and receive calls, reject calls, and adjust the call volume.

## Make a call

---

- 1 Press [.
- 2 Enter an area code and phone number.
- 3 Tap  or press [].
  - For a video call, tap **Menu** > **Video Call**.
- 4 To end the call, press [.



## Make a call from Phonebook

---

- 1 Tap **Start** > **Phonebook**.
- 2 Tap a contact.
- 3 Tap a number.

 
## Answer a call

---

- 1 Press [].
- 2 For a video call, tap **Show me** to allow the caller to see you via the front camera lens.
- 3 To end the call, press [].

## Reject a call

---

Press []. When you reject a call, the caller will hear a busy tone.

## Adjust the call volume






---

To adjust the call volume, press the Volume key up or down during a call.



## Call an international number

---



- 1 Press .
- 2 Tap **Keypad** (if necessary).
- 3 Tap and hold  to insert the + character (this replaces the international access code).
- 4 Tap the number keys to enter the complete number you want to dial (country code, area code, and phone number), and then tap  or press  to dial.
- 5 To end the call, press .



## Access the call log

---

- 1 Tap **Start** > **Call Log**.
- 2 Select one of the following filters for your call log results:

Icon	Function
	All calls
	Incoming calls

Icon	Function
	Outgoing calls
	Missed calls


- 3 Scroll through the call log.
  - To make a call, tap  next to the number you want to dial.
  - To check the call time, tap **Menu > Call Timer**. Tap  to reset the call time.

## Messaging

Learn to use messaging functions.

### Send a text message


---

- 1 Tap **Start > Message**.
- 2 Tap .
- 3 Tap **Tap to add recipients** to enter a contact.

- 4 Tap the message field and enter your message text.
- 5 Tap **Send** to send the message.

## Send a multimedia message


---

- 1 Tap **Start > Message**.
- 2 Tap .
- 3 Tap **Tap to add recipients** to enter a contact.
- 4 Tap the message field and enter your message text.
- 5 Tap **Menu > Insert** to add an attachment.
- 6 Tap **Menu > Attach** > an option to attach other types of files (if necessary).
- 7 Tap **Send** to send the message.

## Send an email message

---

Depending on your service provider, you need to add an email account first.

- 1 Tap **Start** > **E-mail**.
- 2 Tap the name of an email account.
- 3 Tap **Menu** > **New**.
- 4 Enter the recipient's address in the to field or tap **Menu** > **Add Recipient...** to select a contact.  
 The Cc and Bcc fields are located above the from field.
- 5 Tap the subject field and enter a message subject.
- 6 Tap the message field and enter your message text.
- 7 Tap **Menu** > **Insert** > an option to attach files (if necessary).
- 8 Tap **Send** to send the message.

## View messages

---

You can access message folders for all your messaging accounts (email, SMS, and MMS).

To view messages,

1 Tap **Start** > **Message** or **E-mail**.

2 Tap the name of an account (if necessary).

3 Tap a message to view it.



You can view all text or multimedia messages sent to and received from a specific contact like a messenger.

## Add an email account

---

1 Tap **Start** > **E-mail**.

2 Tap **Setup E-mail**.

3 Enter your email address and password and tap **Next**.

4 Follow the on-screen instructions to complete the account setup.

# Multimedia

Learn to capture photos and videos, listen to music, and take advantage of your device's multimedia features.

 
## Camera


Your device allows you to take digital photos or record videos.

### Capture a photo

---

- 1 Press the Camera key.
- 2 Rotate the device anti-clockwise to the landscape orientation.

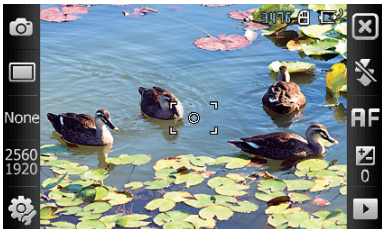


 The camera interface appears only in the landscape orientation.

- 3 Aim the lens at the subject and make any adjustments.  
▶ p. 55
- 4 Press the Camera key to capture the photo.

## View a photo









---

 
 

























- 1 From the viewfinder, tap .
- 2 Scroll to the photo you want.

## Adjust Camera settings

---

From the viewfinder, tap an icon and then tap a mode or setting.

Icon	Function
	Switch to camcorder
	Change the shooting mode: <ul style="list-style-type: none"><li>• : Single</li><li>• : Continuous</li><li>• : Smile</li><li>• : Mosaic</li><li>• : Panorama</li><li>• : Action</li></ul>

 
Icon	Function
	Change the scene mode: <ul style="list-style-type: none"> <li>•  : None</li> <li>•  : Portrait</li> <li>•  : Landscape</li> <li>•  : Sunset</li> <li>•  : Dusk &amp; Dawn</li> <li>•  : Night Shot</li> <li>•  : Text</li> <li>•  : Sports</li> <li>•  : Back Light</li> <li>•  : Party &amp; Indoors</li> <li>•  : Beach &amp; Snow</li> <li>•  : Fall Color</li> <li>•  : Firework</li> <li>•  : Candle Light</li> </ul>
	Change the image size
	Change the camera settings
	Change the flash setting: <ul style="list-style-type: none"> <li>•  : Off</li> <li>•  : On</li> <li>•  : Auto</li> </ul>
	Change the auto focus setting: <ul style="list-style-type: none"> <li>•  : Auto</li> <li>•  : Macro</li> <li>•  : Face</li> </ul>
	Adjust the brightness
	Access quick view






## Record a video

---

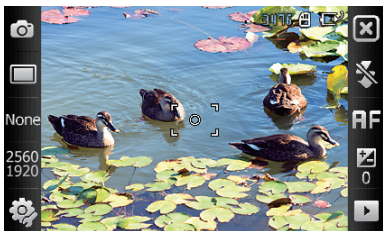- 1 Press the Camera key.
- 2 Rotate the device anti-clockwise to the landscape orientation.





 The camera interface appears only in the landscape orientation.

- 3 Tap  to launch the camcorder.
- 4 Aim the lens at the subject and make any adjustments.  
▶ p. 58
- 5 Press the Camera key to begin recording.
- 6 When you are finished, tap  or press the Camera key to stop recording.

## Play a video








---







- 1 From the viewfinder, tap .
- 2 Scroll to the video you want.
- 3 Tap  to play the video.

## Adjust Camcorder settings

---



From the viewfinder, tap an icon and then tap a setting.


Icon	Function
	Switch to camera
	Change the recording mode: <ul style="list-style-type: none"><li>• : Normal</li><li>• : MMS</li><li>• : Slow</li></ul>
	Change the video resolution
	Change the camcorder settings

Icon	Function
	Change the flash setting: <ul style="list-style-type: none"> <li>•  : Off</li> <li>•  : On</li> <li>•  : Auto</li> </ul>
	Adjust the brightness
	Access quick view

## Capture photos in Smile shot mode



---

- 1 Press the Camera key.
- 2 Rotate the device anti-clockwise to the landscape orientation.
- 3 Tap  > .
- 4 Aim the camera lens at your subject and press the Camera key.
  - The device recognises faces in an image and detects when your subjects smile. When all your subjects are smiling, the camera will automatically capture the photo.

-  In some cases, you may have to disable smile shot to capture a photo of your subject, even if he or she is smiling.

## Create a photo mosaic

---



- 1 Press the Camera key.
- 2 Rotate the device anti-clockwise to the landscape orientation.
- 3 Tap  > .
- 4 Select a mosaic type.
- 5 Aim the camera lens at your subject and press the Camera key to capture the first shot.

- 6 Repeat step 5 to capture the rest of the shots. When you have captured all the shots necessary for the mosaic, the camera will automatically combine them into one photo.



## Capture panoramic photos

---

- 1 Press the Camera key.
- 2 Rotate the device anti-clockwise to the landscape orientation.
- 3 Tap  > .

- 4 Aim the camera lens at your subject and press the Camera key to capture the first shot.
- 5 Slowly move the device to a direction. The device captures the next photo automatically.





- 6 Repeat step 5 to capture the rest of the shots. When you have captured all the shots necessary for the panoramic photo, the camera will automatically combine them into one panoramic photo.

## Capture photos in Action shot mode

---

In Action shot mode, you can capture shots of a moving subject and then combine them into a single photo that shows the action.

- 1 Press the Camera key.
- 2 Rotate the device anti-clockwise to the landscape orientation.
- 3 Tap  > .
- 4 Aim the camera lens at your subject in motion and press the Camera key to capture the first shot.
- 5 Move the device to follow the moving subject. The device captures the next photo automatically.

6 Continue to follow the subject until the device has captured all the shots necessary for the action photo. The camera will automatically combine them into one photo.



- Move the device horizontally or vertically to track the moving subject.
- In Action shot mode, the part of the scene that is not captured appears black.
- The distance between the camera and subject should be at least 3 metres.
- For best results, capture photos in well-lit areas with plenty of contrast between the subject and the background.



# Media Player

Your device is equipped with Media Player, as well as Windows Media Player. The procedures that follow explain how to use Media Player. For information about Windows Media Player, refer to embedded help system.

## Add music files to your device

---

Use any of the following methods to add music files to your device:

- Copy files to a memory card and insert the card into the device ► p. 17
- Download files from the wireless web (refer to the embedded help system)
- Receive via Bluetooth ► p. 135
- Synchronise with ActiveSync® ► p. 80



## Update the library

---

 









- 1 Tap **Start** > **Media Player**.
- 2 Tap **Search** to locate and add new files to the Media Player library.
- 3 When the library is updated, tap **Done**.

## Play music or video files

---

- 1 Tap **Start** > **Media Player**.
- 2 Tap **Player** (if necessary).
- 3 Tap  to open the currently playing list.
- 4 Tap .
- 5 Select files you want to play and tap **Done**.
- 6 Tap a file.

## 7 During playback, use the following controls:


Icon	Function
	Adjust the volume
	Skip to the previous file; Scan backward in a file (tap and hold)
	Pause playback
	Resume playback
	Skip to the next file; Scan forward in a file (tap and hold)
	<ul style="list-style-type: none"><li> : Change the sound effect</li><li> : Select a surround sound system</li><li> : Change the shuffle or repeat option</li><li> : Specify a section to repeat</li></ul>



- SRS CS Headphone™ delivers a 5.1 surround sound experience over standard headphones or earbuds when listening to multichannel content, such as DVD movies.
- WOW HD™ significantly improves the playback quality of audio, delivering a dynamic 3D entertainment experience with deep, rich bass and high frequency clarity for crisp detail.


## Create a playlist

---

- 1 Tap **Start** > **Media Player**.
- 2 Tap **Library** to view the library.
- 3 Tap .
- 4 Tap **Menu** > **New Playlist**.
- 5 Enter a title for your new playlist.
- 6 Select a photo for your playlist (if necessary).
- 7 Tap **Done**.

## Add files to a playlist

---

- 1 Select a playlist.
- 2 Tap .
- 3 Select files you want to add and tap **Done**.

# Photo

Learn to view photos and slideshows.


## View a photo

---

- 1 Tap **Start** > **Photo**.
- 2 Tap a folder or tap **All** to view all thumbnails.
- 3 Tap a thumbnail to view the photo.
  - While viewing the photo, tap and hold the screen. When up and down arrows appear, scroll up or down to zoom in or out.

## Start a slideshow

---

- 1 Tap **Start** > **Photo**.
- 2 Tap a folder or tap **All** to view all thumbnails.
- 3 Tap **Menu** > **Slide show**, or **Slide show**.
  - You can tap the screen and  to select a background music.


4 To end the slideshow, tap the screen and **OK**.



## Digital Frame








With Digital Frame, you can view slideshows with background music.

### View slideshows with background music

---

- 1 Tap **Start** > **Digital Frame**.
- 2 Rotate the device anti-clockwise to the landscape orientation.
- 3 Tap .
- 4 Rotate the device clockwise to the portrait orientation.
- 5 Select a folder of photos to view and set transition effects and time.
- 6 Tap the sound field.
- 7 Tap the check boxes next to music files you want.

- 8 Tap **Select**.
- 9 Tap  next to **Enable Background Sound**.
- 10 Tap **Done**.
- 11 Rotate the device anti-clockwise to the landscape orientation.
- 12 To begin the slideshow, tap .
- 13 During playback, use the following controls:

Icon	Function
	Change the layout of the display
	Skip to the previous photo
	End the slideshow
	Skip to the next photo
	Change the style of the date and time on the screen
	Change the slideshow settings
	Close Digital Frame








- Use the Volume key to adjust the volume.

# FM Radio

You can listen to your favourite stations with FM radio.

## Listen to the FM radio

---

- 1 Plug a headset into the headset jack.
- 2 Tap a type and tap **OK**.
- 3 Tap **Start > FM Radio**.
- 4 Tap  to turn on the radio.
- 5 Tap  or  to scan through available radio stations.
  - To tune a radio station, tap  or .
  - To adjust the volume, tap .
  - To change the sound output, tap .

## Save radio stations by automatic tuning


---

- 1 From the radio screen, tap **Scan**.
- 2 When the scan is complete, tap **Done**.



## Save radio stations manually

---

- 1 From the radio screen, scroll to the radio station you want to save.
- 2 Tap one of the  symbols near the bottom of the screen.

## Select a station

---

- 1 From the radio screen, tap **FM 1** or **FM 2**.
- 2 Tap the station you want from the area near the bottom of the screen.

## Record the FM radio

---




- 1 From the radio screen, tap **Menu** > **Record** to record the current station.
- 2 When you are finished, tap **Stop**. The recorded file is saved in **My Storage** > **FM Radio**.

# Video Editor





With Video Editor, you can edit or make videos by combining photos or videos.

## Create a storyboard

---


- 1 Tap **Start** > **Video Editor**.
- 2 Rotate the device anti-clockwise to the landscape orientation.
- 3 Tap **Storyboard**.
- 4 Tap .
- 5 Tap the check boxes on each thumbnail image (videos or images) you want to add to the storyboard. To select all, tap  (to deselect all, tap .
- 6 Tap **Done**.

7 Customise the storyboard as desired by tapping the following icons (refer to the Extended Usage Guide for more information about customising storyboards):

- : add clips
- : add audio files
- : create a text slide
- : delete clips or change the order of clips
- To edit viewable duration, dub clips (record audio), add subtitles, edit transitions, and add effects, tap a thumbnail image and an appropriate icon.

8 Tap .

9 Tap  to preview the video.






10 Tap  to save the video.

11 Tap .

## Add pre-recorded audio to a video

---






1 Tap **Start** > **Video Editor**.

- 2 Rotate the device anti-clockwise to the landscape orientation.
- 3 Select **Music movie**.
- 4 Select a style and tap .
- 5 Tap the check boxes on images to add and tap .
- 6 Delete images or tap  to change how they are displayed (if necessary).
- 7 Tap .
- 8 Tap an audio file and tap **OK**.
- 9 Tap .
- 10 Tap **Enter text here**.
- 11 Rotate the device clockwise to the portrait orientation.
- 12 Enter a video title and tap **Done**.
- 13 Rotate the device anti-clockwise to the landscape orientation.

- 14 Tap .
- 15 Tap  to preview the video.
- 16 Tap  to save the video.
- 17 Tap .

## Auto-crop a video

---

- 1 Tap **Start** > **Video Editor**.
- 2 Rotate the device anti-clockwise to the landscape orientation.
- 3 Select **Auto cut**.
- 4 Select a style and tap .
- 5 Tap the check box on a video and tap .
- 6 Tap  to preview the video.
- 7 Tap  to save the video.
- 8 Tap .

# Games

Play fun games, such as Bubble Breaker and Solitaire. You can also download and play Java games on your device. To access games, tap **Start** > **Games** and a game.

# Java

Your device supports applications and games built on the Java platform. To download Java-based applications,

- 1 Tap **Start** > **Java**.
- 2 Tap **Download Applications...** to launch the Opera browser and go to the Samsung Mobile website.
- 3 Follow the directions on the website to download new Java-based applications.

# Personal productivity

## ActiveSync

With ActiveSync, you can synchronise your device with a computer and back up and restore your data.

### Install ActiveSync on your computer

Before you can synchronise your data, you must install ActiveSync, either from the supplied CD-ROM or the Microsoft website (<http://www.microsoft.com>).

To install ActiveSync from the supplied CD-ROM,

- 1 Insert the CD-ROM into your computer.
- 2 Follow the on-screen instructions to complete the setup.
- 3 When installation is complete, follow the on-screen instructions in the Synchronisation Setup Wizard to connect your device to the computer and create a data sharing partnership.

## Connect your device to a computer

---

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **General Settings** > **USB Connection** > **ActiveSync**.
- 3 Tap **Done**.
- 4 Connect one end (mini-USB) of the PC data cable to the multifunction jack on your device and the other end to the USB port on your computer.

## Synchronise your data

---

When you connect your device to a computer, ActiveSync should begin synchronising your data automatically. You can begin the synchronisation manually by tapping **Sync**. To stop a synchronisation in progress, tap **Stop**.

You can also manually find and copy files from your device to a computer and vice versa. From the Microsoft ActiveSync window, click **Explore**.



For more information on synchronising your data, refer to the embedded help system.



If you format the My Storage folder by using a connected computer, the writing speed to the My Storage folder may be reduced. Format the My Storage folder only from the device to avoid this situation.

## Add an Exchange server

---

- 1 Tap **Start** > **ActiveSync**.
- 2 Tap **Menu** > **Add Server Source...**
- 3 Enter an email address.
- 4 Tap **Next**.
- 5 Enter your Exchange user name, password, and domain name.
- 6 Tap **Next**.
- 7 Enter a server address. To establish a secure connection, tap the check box that reads **This server requires an encrypted (SSL) connection**.

- 8 Tap **Next**.
- 9 Select the types of data to synchronise.
- 10 When you are finished, tap **Finish**.

## Change the synchronisation schedule

---

If you routinely synchronise your data via an Exchange server, you can configure settings for both peak and off-peak schedules. To change the synchronisation schedules,

- 1 Tap **Start > ActiveSync**.
- 2 Tap **Menu > Schedule...**
- 3 Set the following options:
  - **Peak times**: set the frequency of synchronisations during peak hours
  - **Off-peak times**: set the frequency of synchronisations during off-peak hours
  - **Use above settings when roaming**: set to use the synchronisation schedules even when roaming

- **Send/receive when I click Send:** set to synchronise when you tap **Send** in Messaging

4 When you are finished, tap **OK**.

## Smart Sync

With Smart Sync, you can back up and synchronise the contacts, calendar events, and tasks on your device with the server you have specified.

### Configure a server

---

1 Tap **Start > Smart Sync**.




2 Tap **Next**.

- Tap **Menu > Options > Main server > Setup** (if necessary).

3 Enter the URL address of the remote server, as well as the user name and password for your account.




- Secure connections are supported.
- For secure connections, use `https://` instead of `http://` to start the server URL.

- 4 Enter the server ID (if necessary).
- 5 Tap **Server Test**.
  -  If the server test fails, verify the account information you set in the previous step.
- 6 Tap **Next**.
- 7 Tap the check boxes next to the items you want to back up.
- 8 Tap the server path field and enter the database name for each of the data categories.
  -  These options are server-specific and determine how the data is referenced. This information must be supplied by your service provider.
- 9 Tap **Next**.
- 10 Tap **Menu > Options > Connection**.
- 11 Tap the desired network connection type from the list provided.
- 12 Tap **Done**.
- 13 Tap  to return to the main synchronisation window.

## Configure a proxy server

---

For security purposes, some service providers only allow access into their network via a proxy server.

- 1 Tap **Start** > **Smart Sync**.
- 2 Tap **Menu** > **Options** > **Proxy Server**.
- 3 Enter the information requested and tap **Done**.
- 4 Tap  to return to the main synchronisation window.

## Synchronise your data



---

- 1 Tap **Start** > **Smart Sync**.
- 2 Tap **Sync start**.

## Set the synchronisation schedule

---

- 1 Tap **Start** > **Smart Sync**.
- 2 Tap **Menu** > **Options** > **Update**.

- 3 Tap  next to **Auto sync**.
- 4 Tap the **Synchronization Schedule** drop-down menu and select an interval to synchronise your contacts, calendar events, and tasks with the server.
- 5 Tap **Done**.
- 6 Tap  to return to the main synchronisation window.

## Clock

Learn to set and control alarms, reminders, and world clocks. You can also use the stopwatch.

### Set an alarm

---

- 1 Tap **Start** > **Clock**.
- 2 On the **Alarm** tab, tap **New**.
- 3 Set the alarm options.
- 4 When you are finished, tap **Done**.



The auto power-up feature sets the device to automatically turn on and sound the alarm at the designated time if the device is turned off. To use this feature, set the alarm to sound at least 3 minutes later.

## Stop an alarm

---

When an alarm without snooze sounds, tap **Dismiss**. When an alarm with snooze sounds, tap **Dismiss** to stop it or **Snooze** to delay the alarm for the length of time you specified. Alarms with snooze will repeat according to the number of times you specified in the settings or until you tap **Dismiss**.



## Schedule an anniversary

---

- 1 Tap **Start** > **Clock**.
- 2 On the **Anniversary** tab, tap **New**.
- 3 Set the anniversary options.
- 4 When you are finished, tap **Done**.

## Create a world clock

---

- 1 Tap **Start** > **Clock**.
- 2 On the **World Clock** tab, tap **New**.
- 3 Tap  to open a list of cities.  
 Tap **Name** or **Time** to sort the list by name or timezone.
- 4 Tap a city.
- 5 Tap **Done**.
- 6 Tap **Set as Home clock** to reset the time zone (if necessary).
- 7 Tap **Done**.

## Use the stopwatch

---

- 1 Tap **Start** > **Clock**.
- 2 On the **Stop watch** tab, tap **Start**.
- 3 Tap **Lap** to record lap times.




- 4 When you are finished, tap **Stop**.
- 5 Tap **Reset** to clear the recorded times.

## Schedule

Use Schedule to keep track of appointments, birthdays, or other events.

### Create a calendar event

---





- 1 Tap **Start** > **Schedule**.
- 2 Tap **New**.
- 3 Complete the fields and adjust the settings for your event.
- 4 When you are finished, tap **Done**.
  -  In the month view, a small triangle will appear under dates with scheduled appointments.

## Change the calendar view

---

1 Tap **Start** > **Schedule**.

2 Tap a tab to change the calendar view:

- : a full month in one view
- : hourly blocks for the days in one full week (Monday to Sunday)
- : hourly blocks for one full day
- : a list of scheduled appointments

## Stop an event reminder

---

When the reminder alarm sounds for a calendar event, tap **Dismiss**.

# Notes

Use Notes to create memos, sketches, and recordings.

## Create a note

---

- 1 Tap **Start** > **Notes**.
- 2 Tap **New** to create a new note (if necessary).
- 3 Enter your note with the input panel.
  - To create sketches ► Create a sketch
  - To create recordings, tap **Menu** > **View Recording Toolbar**.
- 4 When you are finished, tap **OK**.

## Create a sketch

---

- 1 Tap **Start** > **Notes**.
- 2 Tap **New**.
- 3 Make your sketch with strokes.

- 4 To edit the sketch, tap **Menu > Draw**.
  - Tap the sketch to make the selection handles appear. You can then use the handles to drag or resize the sketch or tap **Menu** to access other options.
- 5 When you are finished, tap **OK**.

## Memo

Use Memo to create memos that combine text and freehand drawing. To create a smart memo:



- 1 Tap **Start > Memo**.
- 2 Tap **New** (if necessary).
- 3 Create your memo with the drawing tools and input panel.
- 4 When you are finished, tap **Save**.
- 5 Tap **OK**.

# Recorder

Use Recorder to record, listen to, and send voice memos.

## Record a voice memo

---






- 1 Tap **Start** > **Recorder**.
- 2 Tap **Record**.
- 3 Set recording volume and tap  to begin the recording.
- 4 Record your voice memo.
- 5 When you are finished, tap .
- 6 Tap **OK**.

## Listen to a voice memo

---

- 1 Tap **Start** > **Recorder**.
- 2 Tap a memo. Playback will begin automatically.

3 During playback, use the following controls:

Icon	Function
	Adjust the volume
	Skip to the previous file; Scan backward in a file (tap and hold)
	Pause playback
	Resume playback
	Skip to the next file; Scan forward in a file (tap and hold)

## Tasks

Use Tasks to create to-do lists and reminders.

### Create a task

---

1 Tap **Start** > **Tasks**.

2 Tap **Menu** > **New Task**.

3 Enter details for the task.



To set a reminder for the task, tap the due field and set a due date. Next, tap the reminder field, select **Remind me**, and then specify the time and date of the reminder.

4 When you are finished, tap **OK**.

## Mark a task as completed

---



After completing a task, tap **Start > Tasks**, and tap the check box next to the task name. Once you have marked a task complete, you will no longer receive any scheduled reminders for that task.

## Calculator

Use the calculator to perform basic mathematical calculations. To perform a calculation,

1 Tap **Start > Calculator**.

2 Enter the first number using the calculator buttons on the screen.





- To clear the displayed numbers, tap .
- To clear the last digit entered in a multi-digit entry, tap .

3 Tap the appropriate math function.

4 Enter the second number.

5 To view the result, tap .

You can use the following buttons while performing calculations:

- : clear the number you entered
- : clear any value that is stored in the calculator's memory
- : recall the stored value from memory and inserts it into the current calculation
- : add the current number to the value stored in the calculator's memory

To use a scientific calculator,

1 Tap **Start** > **Calculator**.








2 Tap **Scientific**.



- 3 Rotate the device anti-clockwise to the landscape orientation.
- 4 Perform a calculation by using the buttons on the screen.

## Unit Converter

Use Unit Converter to convert one unit of measure to another. To perform a conversion,

- 1 Tap **Start** > **Unit Converter**.
- 2 Select a type of measurement from the tabs at the top of the screen:
  - : Tip Calculator
  - : Length
  - : Weight
  - : Area
  - : Volume
  - : Temperature
  - : Currency
- 3 Select the unit of measure to convert.

4 Enter the base amount. The device displays the conversion result.



For Currency, tap **Edit Rate** to input the basic rate first.

## Smart Reader

Use Smart Reader to capture information from a business card or a document, and translate text.

### Capture images of business cards or documents

---

1 Tap **Start** > **Smart Reader**.

2 Rotate the device anti-clockwise to the landscape orientation.

3 Tap **BizCard** or **Document**.

4 Align the business card or document in the screen.

- For business cards, you must align the corners of the card with the corners of the frame (the frame will turn green when aligned).

5 Press the Camera key to capture the image.



- If you have activated the **BizCard automatic capture** setting, the device will automatically capture the image once the card is aligned in the frame.
- For best results, place business cards or documents on a flat, level surface and ensure adequate lighting.

6 Tap **Save**.

7 Tap **OK**.


## Translate text

---

1 Tap **Start** > **Smart Reader**.




2 Rotate the device anti-clockwise to the landscape orientation.

3 Tap **Translation**.

4 Tap  to select a translation type.

5 Align the text in the screen.





6 Press the Camera key to capture the image.

- 7 Draw a rectangle over the area you want to translate.
- 8 Tap .
  - To check the translated word, tap .
  - To draw a new rectangle, tap .

## View captured images

---

- 1 Tap **Start** > **Smart Reader**.
- 2 Rotate the device anti-clockwise to the landscape orientation.
- 3 Tap **Image**.
- 4 Tap the following tabs to sort captured images:

Icon	Functions
	View all captured images
	View captured images of business cards
	View captured images of documents
	View captured images of translations


- 5 Scroll left or right to an image.

# Smart Search

Use Smart Search to search for any specific data stored in your device (including contacts, call logs, media files, schedules, messages, or programs) or on the web.



## Search inside the device

---

- 1 Tap **Start** > **Smart Search**.
- 2 Tap the **My Phone** tab (if necessary).
- 3 Tap the **All** drop-down menu and select a category.
- 4 Tap the text input field.
- 5 Enter a letter or a word of the data to search and tap .
  - Any data including the letter or word you have entered will be listed.
- 6 Tap the data you want to access.

## Search on the web

---

- 1 Tap **Start** > **Smart Search**.
  - 2 Tap the **Web** tab (if necessary).
  - 3 Tap the **Google** drop-down menu and select between Google and Bing.
  - 4 Tap the text input field.
  - 5 Enter a letter or a word of the data to search on the web and tap .
    - Any data including the letter or word you have entered will be listed.
  - 6 Tap the data you want to access.
-  You can also get the data from Google Services (Mail, YouTube, Maps) or Bing Services (MSN Today, Hotmail, Messenger, Spaces).

# Web applications

## Web browsing with Opera

Learn to access and bookmark your favourite web pages with the Opera Mobile browser.








- You may incur additional charges for accessing the web and downloading media.
- Available icons may vary depending on your region or service provider.



## Browse the web

---

- 1 Tap **Start** > **Opera Browser**.
- 2 Scroll through the web page.
- 3 Navigate web pages by tapping the following controls:

Icon	Functions
	<a href="#">Return to the previous page</a>

Icon	Functions
	Open a favourite web page
	Open a new tab or page, or page you have previously accessed
	Open the homepage
	Open the browser menu




To search the web, tap the address bar at the top of the screen, tap the lower field and enter a keyword, and tap . To change the default browser from **Opera Browser** to **Internet Explorer**, tap  > **Settings** > **Advanced**. Clear the check box next to **Set Opera as default browser**. To zoom in or out on some web pages, double-tap or tap and hold the screen.



## Bookmark your favourite pages

---

To add a web page to your list of favourites,

- 1 Tap **Start** > **Opera Browser**.
- 2 Tap  > **Saved Pages**.
- 3 Tap .
- 4 Enter a name for the web page, the web address, and select a folder (you can add a new folder by tapping **Add new folder** in the drop-down menu).
- 5 When you are finished, tap .

# Rich Internet

Use Rich Internet to search for ringtones, videos, and images, and download them to your device.



This feature may be unavailable depending on your region or service provider.

- 1 Tap **Start** > **Rich Internet**.
- 2 Scroll to a category and select an option.
- 3 Scroll to a file and download it to your device.

# Search Widget

Use Bing Search and use many service links in directory such as Directions, Maps, Hotmail, and Messenger.


- 1 Tap **Start** > **Search Widget**.
  - 2 Enter a letter or a word of the data to search in Bing Search and tap . is a small orange square icon with a white magnifying glass symbol.
- Tap **directory** to use service links.






# Streaming Player

Use Streaming Player to watch videos or listen to audio files directly from the internet.

## Stream media from the internet

---

- 1 Tap **Start** > **Streaming Player**.
- 2 Tap .
- 3 Enter the URL of a streaming media file.
- 4 Tap **Connect**.
- 5 During playback, use the following controls:


Icon	Function
	Adjust the volume
	Pause playback
	Resume playback
	Stop playback
	Zoom in or out

# Midomi

Use the Midomi web service to identify songs either by singing or humming the song into your device or using your device to grab the song from the radio or other audio source.


## Search for song information by singing or humming the song

---

- 1 Tap **Start** > **Midomi**.
- 2 Tap the **Sing** tab (if necessary).
- 3 Tap the area of the screen that reads **Tap and sing or hum** and begin singing or humming the song.
  -  Try to sing or hum at least 10 seconds of the song for best results.
- 4 When you are finished singing or humming, tap the area that reads **RECORDING**. The Midomi service will search for a match and return the results.

## Search for song information by grabbing the song from an audio source

---

- 1 Tap **Start** > **Midomi**.
- 2 Tap the **Grab** tab (if necessary).
- 3 Tap the area of the screen that reads **Tap and hold to a speaker** and place the device near the audio source.  
 Try to grab at least 10 seconds of the song for best results.
- 4 When you are finished, tap the area that reads **RECORDING**. The Midomi service will search for a match and return the results.

# RSS Reader

Learn to use RSS Reader to get the latest news and information from your favourite websites.


## Subscribe to RSS feeds

---

To subscribe to RSS feeds by entering an address,

- 1 Tap **Start** > **RSS Reader**.
- 2 Tap a feed category.
- 3 Tap **Add Feed**.
- 4 Tap **Add RSS/ATOM URL**.
- 5 Enter the address of an RSS feed and tap **Done**.
- 6 Enter the name of the RSS feed and set a feed category.
- 7 Tap **Add**.

To subscribe to RSS feeds by searching,

- 1 Tap **Start** > **RSS Reader**.
- 2 Tap a feed category.
- 3 Tap **Add Feed**.
- 4 Tap **Search for Feeds**.
- 5 Use the input panel to enter a keyword and tap .
- 6 Tap a feed.
- 7 Tap **Add** > **OK**.

## Update and read RSS feeds

---

- 1 Tap **Start** > **RSS Reader**.
- 2 Tap a category > a feed.
- 3 Tap **Update**.
  - Your device will attempt to connect to the internet. If necessary, activate your internet connection.

- 4 Tap **Done**.
- 5 Tap a headline and a link.

## Podcast

Use Podcast to search for, download, and listen to podcasts.

### Subscribe to Podcasts

---


To subscribe to Podcasts by entering an address,

- 1 Tap **Start > Podcast**.
- 2 Tap **Menu > Add Podcast URL**.
- 3 Enter the address of a podcast and tap **Add > OK**.

To subscribe to Podcasts by searching,

- 1 Tap **Start > Podcast**.
- 2 Tap **Menu > Search Podcast**.



- 3 Use the input panel to enter a keyword and tap . Your device searches for related podcasts and displays the results.
- 4 Tap the podcast you want to subscribe to and tap **Add > OK**.

## Download and play podcasts

---

- 1 Tap **Start > Podcast**.
- 2 Tap a podcast.
- 3 Tap **Menu > Download**.
- 4 Tap items you want to download.
- 5 Tap **Done** to download the items.
- 6 When you are finished, tap **OK**.

## Update your podcast library

---

Once you have subscribed to podcasts (► p. 112), you can easily update your library to listen to the latest episodes. To update your podcast library,

- 1 Tap **Start** > **Podcast**.
- 2 Tap **Update**.
- 3 Tap podcasts you want to update.
- 4 Tap **Done** > **Done**.

# QIK

QIK allows you to easily broadcast live videos over the internet. You can share your live video with others or store the video so your friends and family can view it later.

## Sign up for a new account

---

- 1 Tap **Start** > **QIK**.
- 2 Tap **New user**.
- 3 Enter user information.
- 4 Tap **Join**.
- 5 Follow the on-screen instructions.


## Sign in to QIK

---

- 1 Tap **Start** > **QIK**.
- 2 Tap **Existing user**.
- 3 Enter your login ID and password.
- 4 Tap **Sign in**.
- 5 Follow the on-screen instructions.







## Stream live video to your friends and family

---

- 1 Sign in to the QIK website.
- 2 Tap .

Your video will stream live via the QIK website. To see the live video, visit your personalised webpage:  
<http://qik.com/username>.

While streaming, you can control the streaming video with the following controls (tap the viewfinder to display or hide the controls):

Icon	Function
	Make the stream private (accessibly only by logging in to the QIK website) or public (accessible to anyone)
	Turn the audio on or off
	Change settings
	Add a title and description to the video
	Post the video to YouTube or another website or send a link to the video via Twitter or text message
	Stop the video stream

You can also zoom in or zoom out by pressing the Volume key up or down.

# Communities

Communities is a convenient feature that allows you to post your photos to websites and blogs.

## Upload photos

---

Use Communities to upload photos directly to your website or blog. To upload photos,

- 1 Tap **Start** > **Communities**.
- 2 Tap **Accept** (if necessary).
- 3 Tap a blog or website.
- 4 Tap **Upload**.
- 5 Enter your user name and password.
- 6 Tap **Done**.
- 7 Enter a title for your image and tap **Tap to Add**.
- 8 Navigate to an image and tap the thumbnail.

9 Select other options (if necessary).

10 Tap **Done**.

- The image will be uploaded to the website or blog.

11 When the upload is complete, you can go to the website, view the upload details, or return to the list of sites by tapping the appropriate button.

## Upload photos at a later time (Upload reservation)

With the Upload reservation feature of Communities, you can set a specific date and time to upload your photos to a website or blog. To create an upload reservation,

1 Tap **Start > Communities**.

2 Tap **Menu > Options > Upload reservation**.

3 Tap **New**.

4 Tap a website or blog.

5 Enter a title for your image and tap **Tap to Add**.

- 6 Navigate to an image and tap the thumbnail.
- 7 Select other options (if necessary).
- 8 Tap the **Date** drop-down menu and select a date for the upload reservation.
- 9 Tap the **Time** drop-down menu and set a time for the upload reservation.
- 10 Tap **Done**.



# Samsung Application Store

With Samsung Application Store, you can easily find new applications—games, utilities, references, and more. Browse Samsung Application Store and download applications directly to your device using a Wi-Fi or cellular connection.







- You may incur additional charges for accessing the web and downloading applications.
- This feature may be unavailable depending on your region or service provider.

1 Tap **Start** > **Application Store**.

2 Tap **Accept** to accept the disclaimer information.

3 Tap one of the following tabs to view available applications:

- : New applications
- : Popular paid and free applications
- : Applications sorted by category
- To search for applications, tap  and enter a keyword.

4 Tap an application and download it to the device.

- For free applications: Tap **Get**
- For paid applications: Tap **Buy** > **Purchase**

# Marketplace

Marketplace allows you to find and add new applications to your device. With Marketplace, you can search, browse, preview, buy, and download new applications directly to your mobile device. Available applications depend on your network operator and service provider.

Tap **Start > Marketplace**.

# Microsoft My Phone

Use Microsoft My Phone to synchronise your contacts, calendar, tasks, text messages, music, photos, videos, and other documents with your my phone account at <http://myphone.microsoft.com>.

Tap **Start > Microsoft My Phone**.

# Remote Desktop Mobile

With Remote Desktop Mobile, you can control the desktop of your computer running Windows XP Professional or later, from your device at another location.

First, you need to set up your computer. For information, visit <http://www.microsoft.com/windows>.

To connect your device to your computer,

- 1 Tap **Start** > **Remote Desktop Mobile**.
- 2 Enter your computer name or IP address.
- 3 Enter your computer user name, password, and domain name.
- 4 Tap **Connect**.

# Connectivity



## Connect to the internet or your network

You can connect to your Internet Service Provider (ISP) and use the connection to send and receive email messages and to browse the internet. You can also connect to any private network, such as a corporate network you use at work.

### Connect to the internet


---

- 1 Obtain the following information from your internet service provider: phone number for your ISP server, user name, and password.
- 2 Tap **Start** > **Settings**.
- 3 On the **Advanced Settings** tab, tap **Connection** > **Connections**.
- 4 In **My Internet**, tap **Add a new modem connection**.

- 5 Create a modem connection. To view detailed information for any screen while changing the settings, tap the  icon.
- 6 When the connection is successfully configured, run **Opera Browser** or **Internet Explorer** to begin browsing the internet. Your device will automatically attempt to connect.  
 To set up a network card or wireless network connection to your ISP, add a new connection under **My Work Network**.

## Connect to work

---

- 1 Obtain the following information from your network administrator: server phone number, user name, and password.
- 2 Tap **Start > Settings**.
- 3 On the **Advanced Settings** tab, tap **Connection > Connections**.
- 4 In **My Work Network**, set up a modem, VPN server connection, or proxy server. To view detailed information for any screen while changing the settings, tap the  icon.

- 5 When the connection is successfully configured, run **Opera Browser** or **Internet Explorer** to begin browsing the internet. Your device will automatically attempt to connect.





 


You can select an authentication method for GPRS connections by using **GPRS Authentications**.

## End a connection

---

To disconnect,

- When connected via dial-up or VPN, tap the  icon on your status bar, and then tap **Disconnect**.
- When connected via ISP, tap any connectivity icon on your status bar and tap the active network connection icon (  ,  ,  , or  ). The wireless manager screen appears. Tap **All Data Connection** and **Disconnect**.
- When connected via a cable, detach your device from the computer by disconnecting the cable.
- When connected via a modem or a network (Ethernet) card, remove the card from your device.

To set options to end a network connection,

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **General Settings** > **Wireless Manager**.
- 3 Tap **Menu** > **Data con. Settings**.
- 4 Tap the check box next to an option.
  - **End key (Short Press)**: When you press the End key, the network connection is disconnected.
  - **Sleep**: When Sleep mode activates, the network connection is disconnected.
  - **No packet for**: When the data packet is not transferred for the specific time interval, the network connection is disconnected.

## Find the active network connection

---

The icons at the top of the display will show active connections. Tap any connectivity icon to view the active connection. A small window will display the connection information.



Wi-Fi and data connections can be active at the same time. When both connections are active, the device will use Wi-Fi as the default internet connection.

## Use Internet Sharing

---

Set your device to be used as a wireless modem.

- 1 Connect your device to another device or computer via the USB port or Bluetooth.
- 2 Tap **Start** > **Internet Sharing**.
- 3 Select the PC connection and network connection types.
- 4 Tap **Connect** to activate the internet connect.



# GPS

To use GPS applications of your device, you can connect to an external GPS receiver and enhance the GPS functionality.

## Connect to an external GPS receiver

---

By default, the device uses the internal GPS receiver but you can connect to an external GPS receiver. Because the internal GPS receiver uses the COM9 hardware port and baud rate 4800, you need to change the COM port setting to use an external GPS receiver.



Your device is compatible only with Bluetooth-enabled GPS receivers.

- 1 Turn on your external GPS receiver.
- 2 Turn on the Bluetooth wireless feature of your device and connect it with the external GPS receiver. ► p. 132
- 3 From the Bluetooth screen, tap **Menu > Device Service > Options** next to **Serial Port > New Outgoing Port**.

- 4 Select the connected external GPS receiver, tap **Next**, and check the COM port.
- 5 Tap **Start** > **Settings**.
- 6 On the **Basic Settings** tab, tap **General Settings** > **GPS** > **Connection**.
- 7 In **GPS hardware port** drop-down menu, tap a port for the external GPS receiver.
- 8 Tap **Done**.

## Update the GPS functionality

---



Enhance the GPS functionality by downloading GPS data files. You can improve the speed and accuracy of positioning capability and expand your navigation to areas where cellular networks are accessible. Use XTRA or Assist GPS depending on your service provider.

To use XTRA,

- 1 Tap **Start** > **Settings**.
  - 2 On the **Basic Settings** tab, tap **General Settings** > **GPS** > **XTRA**.
  - 3 Tap  next to **Enable XTRA Server**.
  - 4 Select when to automatically download XTRA data.
  - 5 Tap  next to **Enable SNTP Server**.
  - 6 Tap **Download XTRA Data**.
- GPS data of up to 35 KB will be downloaded.
  - Your device will connect to the internet depending on the configuration on XTRA.

To use Assist GPS,

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **General Settings** > **GPS** > **Assist GPS**.

- 3 Tap  next to **Enable A-GPS**.
- 4 Enter the server address and select an access point.  
 Server addresses may differ depending on the service provider.  
The default port is 7275.
- 5 Tap **Done**.


## Bluetooth

You can connect with other Bluetooth-enabled wireless devices within a range. Walls or other obstacles between devices may block or impair the wireless connection.

### Turn on the Bluetooth wireless feature

---

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Network Settings** > **Bluetooth**.
- 3 Tap the device icon in the middle of the screen.

- 4 To allow other devices to find and connect to your device, tap **Menu** > **Device Info**, and tap  next to **Enable visibility to other devices**.
- 5 Tap **Done**.

## Change Bluetooth device names



---

You can alter the name that your device will display to other Bluetooth-enabled devices. To change the device name,

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Network Settings** > **Bluetooth** > **Menu** > **Device Info**.
- 3 Tap the name input field.
- 4 Enter a device name.
- 5 Tap **Done**.

## Search for and pair with a Bluetooth-enabled device

---

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Network Settings** > **Bluetooth**.
- 3 Tap **Search**.
  - Your device will search for and display the icons of Bluetooth-enabled devices.
  - To select a search option, tap **Menu** > **Options** and select a type from the drop-down menu.
- 4 Drag a device icon into the centre.
- 5 Enter the 1- to 16-digit Bluetooth PIN for the device you are trying to connect to and tap **Done**.
  -  To pair with another Bluetooth-enabled device, both devices must use the same passcode. Headsets or hands-free car kits may use a fixed passcode, such as **0000**.
- 6 Select the connected device icon.
- 7 Tap  next to services and tap **Done**.

## Send data via the Bluetooth wireless feature

---

- 1 Locate an item or a file to send.
- 2 Select a sending option.
- 3 Drag a device icon into the centre.

## Receive data via the Bluetooth wireless feature

---

- 1 Enter the PIN for the Bluetooth wireless feature and tap **Next** (if necessary).
- 2 When a pop-up window appears, tap **Hide**.
  - Tap **Cancel** to stop receiving the data.
- 3 When prompted to allow incoming data, tap **Yes** to save the data to your device.

To receive all incoming beams,

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Network Settings** > **Bluetooth** > **Menu** > **Device Service**.
- 3 Tap **Options** next to **Object Push**.
- 4 Check  next to **Enable to receive all Incoming beams**.
- 5 Tap **Done**.

## Activate the smart pairing option

---

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Network Settings** > **Bluetooth** > **Menu** > **Device Service**.
- 3 Tap **Options** next to **Hands-free** or **Wireless Stereo**.
- 4 Check  next to **Enable smart pairing**.



# Wi-Fi

Your device features wireless networking capabilities that allow you to connect to wireless local area networks (WLANs).



 
This device uses non-harmonised frequency and is intended for use in all European countries.

The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

## Activate and connect to a WLAN

---

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Network Settings** > **Wi-Fi**.
- 3 Tap the device icon in the middle of the screen.
  - The device will start searching and display available WLAN connections.

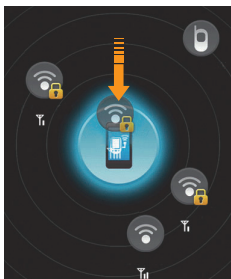

- 4 Drag a network icon to the device icon in the middle of the screen.
  - The device will attempt to connect to the WLAN.
- 5 Select a network profile, enter a password and tap **Done** (if necessary).

## Create a new Wi-Fi connection

---

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Network Settings** > **Wi-Fi**.
- 3 Tap **Menu** > **Add New**.
- 4 Enter a network name and configure connection settings.
- 5 When you are finished, tap **Next**.
- 6 Enter network authentication settings.

- 7 Tap **Next** (if necessary).
- 8 Set the IEEE 802.1x access option and the extensible authentication protocol (EAP) type (if necessary).
- 9 Tap **Finish**.
  - The new Wi-Fi network will appear on the Wi-Fi screen. To connect to the network, drag the network icon to the device icon in the middle of the screen.


## Connected Home

The connected home application allows you to share media files between devices in your home. You can access and play files from devices that support the Digital Living Network Alliance (DLNA) standard.

### Play files with another device

---

- 1 Search for and connect to a network using the WLAN.  
▶ p. 137
- 2 Tap **Start** > **Connected Home**.

- 3 Tap **SELECT CONTENTS**.
- 4 Tap the icon in the middle of the screen to select your device.
- 5 Tap **Menu > Settings**.
- 6 Tap **Sharing Folders...** under **My media Sharing**.
- 7 Tap **Add..** to share a folder (maximum of three folders).
- 8 Navigate to and tap a folder name.
  -  You can change a shared folder by tapping **Change...** and locating a new folder. You can remove a folder from the list of shared folders by tapping **Delete**.
- 9 Tap **Done** twice.
- 10 Tap the icon in the middle of the screen to select your device.
- 11 Select a folder and locate files.

- 12* Select a player—the one that will play the media files.
- The media files of the selected folder appear or start playback on the selected player. You can control playback using icons of your device.
  - A buffer may occur on the player depending on the network connection and the connected server.

## Play files from one device to the other device

---

- 1* Search for and connect to a network using the WLAN.  
▶ p. 137
- 2* Tap **Start** > **Connected Home**.
- 3* Select **SELECT CONTENTS**.
- 4* Select a device—the one that contains media files.
- 5* Select a folder and locate files.

- 6 Select a player—the one that will play the media files.
  - The selected media files appear or start playback on the selected player. You can control playback using icons of your device.
  - A buffer may occur on the player depending on the network connection and the connected server.

## Download files to your device

---

- 1 Search for and connect to a network using the WLAN.  
▶ p. 137
- 2 Tap **Start > Connected Home**.
- 3 Select **SELECT CONTENTS**.
- 4 Select **Menu > Settings**.
- 5 Tap **Change...** under **Download location**.
- 6 Navigate to and tap a folder name.
- 7 Tap **Done**.

8 Select a device—the one that contains media files.

9 Select a folder and locate files.

10 Tap **Menu > Download**.

11 Select files and tap **Download**.

- The files will be downloaded to your device.

## Delete files

---

You can delete files from the now playing list to prevent them from being played on your device. This will not delete the file from the server.

# Troubleshooting

If you have trouble with your device, try these procedures before you contact a service professional.

**When you turn on your device, the following messages may appear:**

Message	Try this to solve the problem:
The SIM card is missing.	Ensure that the SIM or USIM card is installed correctly.
Enter PIN.	When using the device for the first time or when the PIN requirement feature is enabled, you must enter the PIN supplied with the SIM or USIM card. To disable the PIN requirement feature, tap <b>Start</b> > <b>Settings</b> > <b>Basic Settings</b> tab > <b>Security</b> > <b>SIM PIN</b> , and then tap  next to <b>Require PIN when phone is used</b> .
SIM card blocked.	Your SIM or USIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.



## **Your device does not show a signal (no bars next to the network icon)**

- If you just turned on the device, wait about 2 minutes for your device to find the network and receive a signal.
- You may not be able to receive a signal in tunnels or elevators. Move to an open area.
- You may be between service areas. You should receive a signal when you enter a service area.


## **You forgot a security code, PIN, or PUK**

If you forget or lose this or another code, contact the seller or your service provider.

## **Your display shows white lines**

The display may show white lines if you have turned the device on after a long period of disuse or if you removed the battery without first turning off the device. The display should correct itself in a short time.

## **You enter a number, but the call is not dialed**

- Ensure that you have pressed [].
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

### **You select a contact to call, but the call is not dialed**

- Ensure that the correct number is stored in the contact information.
- Re-enter and save the number (if necessary).

### **Another caller cannot hear you speaking**

- Ensure that you are not blocking the built-in microphone.
- Move the built-in microphone closer to your mouth.
- If using a headset, ensure that it is properly connected.

### **The sound quality of a call is poor**

- Ensure that you are not blocking the internal antenna and the Bluetooth antenna. The internal antenna and the Bluetooth antenna are located at the bottom of the device.
- When you are in areas with weak signals, you may lose reception. Move to another area and try again.

## **The battery does not charge properly or sometimes your device turns itself off while charging**

- Disconnect the device from the charger, remove and reinstall the battery, and try charging again.
- The battery terminals may be dirty. Wipe both gold-coloured contacts with a clean and soft cloth and try charging the battery again.
- If the battery no longer charges completely, dispose of the old battery properly and replace it with a new battery.
- If you are using the PC data cable to charge the battery, install ActiveSync on your computer first.

## **Your device is hot to the touch**

When you use applications that require more power, your device may heat up. This is normal and should not affect your device's lifespan or performance.

## **Your device cannot connect to the internet**

- Ensure that you have entered valid settings for your internet service provider.
- Ensure that you have activated the wireless connection to your mobile service provider and that the signal is not obstructed.
- Ensure that you have entered the correct user name and password.

### **You cannot find a Bluetooth-enabled device**

- Ensure that both devices have activated the Bluetooth wireless feature.
- Ensure that the distance between the devices is not more than 10 metres and that they are not separated by walls or other obstacles.
- Ensure that the settings for each device allow them to be visible to other devices.
- Ensure that both devices are compatible with Bluetooth wireless technology.
- Ensure that the correct PIN has been entered on both devices.

### **You cannot listen to music on a remote Bluetooth headset**

- Ensure that your device is connected to the headset.
- Ensure that the music format you are trying to listen to is supported by the headset.
- Ensure that the distance between the headset and device is not more than 10 metres and that they are not separated by walls or other obstacles.

# Safety and usage information

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your device.



## Safety warnings

### Keep your device away from small children and pets

Keep your device and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

### Protect your hearing



Excessive exposure to sound at high volumes can cause hearing damage.

Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

## **Install mobile devices and equipment with caution**

Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted. Avoid placing your device and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

## **Handle and dispose of batteries and chargers with care**

- Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.
- Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices.
- Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

### **Avoid interference with pacemakers**

Maintain a minimum of 15 cm (6 inches) between mobile devices and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your device is interfering with a pacemaker or other medical device, turn off the device immediately and contact the manufacturer of the pacemaker or medical device for guidance.

### **Turn off the device in potentially explosive environments**

Do not use your device at refuelling points (service stations) or near fuels or chemicals. Turn off your device whenever directed by warning signs or instructions. Your device could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

### **Reduce the risk of repetitive motion injuries**

While using your device, hold the device with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

### **Do not use the device if the screen is cracked or broken**

Broken glass or acrylic could cause injury to your hand and face. Bring the device to a Samsung service centre to replace the screen. Damage caused by careless handling will void your manufacturer's warranty.



## **Safety precautions**

### **Drive safely at all times**

Avoid using your device while driving and obey all regulations that restrict the use of mobile devices while driving. Use hands-free accessories to increase your safety when possible.

### **Follow all safety warnings and regulations**

Comply with any regulations that restrict the use of a mobile device in a certain area.

### **Use only Samsung-approved accessories**

Using incompatible accessories may damage your device or cause injury.



### **Turn off the device near medical equipment**

Your device can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

### **Turn off the device or disable the wireless functions when in an aircraft**

Your device can cause interference with aircraft equipment. Follow all airline regulations and turn off your device or switch to a mode that disables the wireless functions when directed by airline personnel.

### **Protect batteries and chargers from damage**

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.
- Risk of explosion if a battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

## Handle your device carefully and sensibly

- Do not disassemble your device due to a risk of electric shock.
- Do not allow your device to get wet—liquids can cause serious damage and will change the colour of the label that indicates water damage inside the device. Do not handle your device with wet hands. Water damage to your device can void your manufacturer's warranty.
- Avoid using or storing your device in dusty, dirty areas to prevent damage to moving parts.
- Your device is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your device, as paint can clog moving parts and prevent proper operation.
- If your device has a camera flash or light, avoid using it close to the eyes of children or animals.
- Your device may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time.

## **Avoid interference with other electronic devices**

Your device emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



## **Important usage information**

### **Use your device in the normal position**

Avoid contact with your device's internal antenna.

### **Allow only qualified personnel to service your device**

Allowing unqualified personnel to service your device may result in damage to your device and will void your warranty.

## Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

## Handle SIM cards and memory cards with care

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

## Ensure access to emergency services

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

## Specific Absorption Rate (SAR) certification information

Your device conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile devices that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 watts per kilogram.

During testing, the maximum SAR recorded for this model was 0.496 watts per kilogram. In normal use, the actual SAR is likely to be much lower, as the device has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your device reduces your overall exposure to RF energy.

The Declaration of Conformity at the back of this guide demonstrates your device's compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung mobile device website.


## Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature

 indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

## Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life.

Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

## Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorised by the content owner or service provider. Without limiting the foregoing, unless expressly authorised by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

"THIRD PARTY CONTENT AND SERVICES ARE PROVIDED "AS IS." SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE. SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE,



SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES."

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

# Index

## ActiveSync

- Exchange server, 81
- installing, 79
- schedule, 82
- synchronise, 80

## alarm

- setting, 86
- stopping, 87

## background image

- see Today Screen

## battery

- charging, 16
- installing, 15

## Bluetooth

- activating, 132
- connecting to other devices, 134

- receiving data, 135
- sending data, 135

## browser

- see Opera

## calculator 95

## calendar

- see Schedule

## calls

- answering, 48
- from Call Log, 50
- from Phonebook, 47
- international number, 49
- making, 47
- rejecting, 48

## camera 54

## Communities 118

Connected Home 139

## contacts

- assigning photos, 45
- assigning ringtones, 46
- assigning speed dial numbers, 45
- copying and moving contact cards, 43
- creating contacts, 42
- organising, 44
- searching for contacts, 43

## converter

- see Unit Converter

Cube launcher 22

Digital Frame 70

Etiquette pause 27

## Exchange Server

- see ActiveSync

## FM radio

- listening, 72
- recording songs, 73
- saving stations, 72

games 78

GPS 129

help system 34

## internet

- see Opera

Internet Sharing 128

Java 78

lock 20

Marketplace 122

## Media Player

- creating a playlist, 68
- playing files, 66
- updating the library, 66

**Memo** 92

**memory card** 17

## **Messaging**

adding email accounts, 53

sending email, 52

sending multimedia, 51

sending text, 50

viewing, 53

**Microsoft My Phone** 122

**Midomi** 108

## **notes**

creating, 91

sketches, 91

## **Opera**

adding bookmarks, 105

browsing, 103

## **Photo**

starting slideshows, 69

viewing photos, 69

## **photos**

basic capturing, 54

capturing in Action shot mode, 63

capturing in Smile shot mode, 59

capturing panoramic photos, 61

mosaic, 60

viewing, 55

**Podcast** 112

**QIK** 115

## **radio**

see FM radio

**Recorder** 93

**Remote Desktop Mobile** 123

**reset** 24

**Rich Internet** 106

**RSS Reader** 110

**Samsung Application Store** 121

**Schedule**

- changing views, 90
- creating events, 89
- stopping event alarms, 90

**SIM card** 15

**sketches** 91

**Smart Reader**

- capturing images, 98
- translating text, 99
- viewing captured images, 100

**Smart Search** 101

**Smart Sync**

- proxy server, 85
- schedule, 85
- synchronise, 85
- web server, 83

**stopwatch** 88

**Streaming Player** 107

**Task Switcher** 33

**Tasks**

- creating, 94
- marking as completed, 95

**text input**

- Block Recognizer, 36
- keyboard, 37
- Letter Recognizer, 38
- Samsung Keypad, 39
- Transcriber, 40

**themes**

- see Today Screen

**Today screen**

- adding or removing items, 26
- changing themes or background images, 25

**Unit Converter** 97

USIM card 15

Video Editor 74

videos

playing, 58

recording, 57

volume

call volume, 48

system volume, 27

Widgets

customising widgets, 31

dragging to the Today  
screen, 30

opening the toolbar, 28

Wi-Fi 137

world clock 88

## Declaration of Conformity (R&TTE)

We, **Samsung Electronics**  
declare under our sole responsibility that the product

### GSM WCDMA Wi-Fi Mobile Phone : GT-I8000

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1 : 2001 +A11:2004	RADIO	EN 301 489-19 V1.2.1 (11-2002)
	SAR EN 50360 : 2001		EN 301 489-24 V1.4.1 (09-2007)
EMC	EN 62209-1 : 2006		EN 301 511 V9.0.2 (03-2003)
	EN 301 489-01 V1.6.1 (09-2005)		EN 300 328 V1.7.1 (10-2006)
	EN 301 489-01 V1.8.1 (04-2008)		EN 301 908-1 V3.2.1 (05-2007)
	EN 301 489-07 V1.3.1 (11-2005)		EN 301 908-2 V3.2.1 (05-2007)
	EN 301 489-17 V2.2.1 (05-2009)		

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Forsyth House, Churchfield Road,  
Walton-on-Thames, Surrey, KT12 2TD, UK  
Identification mark: 0168

**CE 0168** 

The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.  
(Representative in the EU)

Samsung Electronics Euro QA Lab. Blackbushe Business Park,  
Saxony Way, Yateley, Hampshire, GU46 6GG, UK\*  
2010.06.23



Joong-Hoon Choi / Lab Manager

(place and date of issue)

(name and signature of authorised person)

\* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

**SAMSUNG  
ELECTRONICS**



World Wide Web  
<http://www.samsungmobile.com>

Printed in Korea  
Code No.:GH68-25979A  
English (EU). 07/2010. Rev. 1.4