



CREATOR

5762





1

 


2

2




3

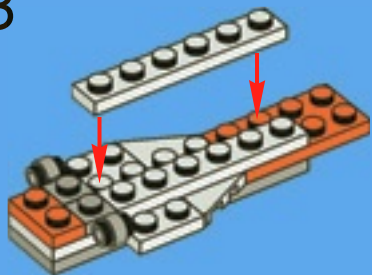


4



 
5

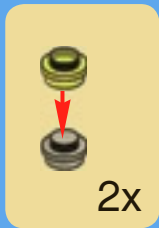


6

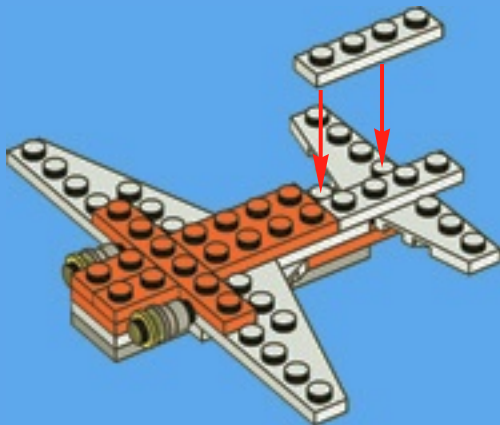 


7

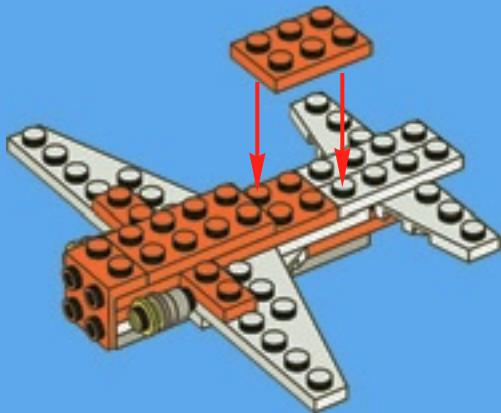 


8

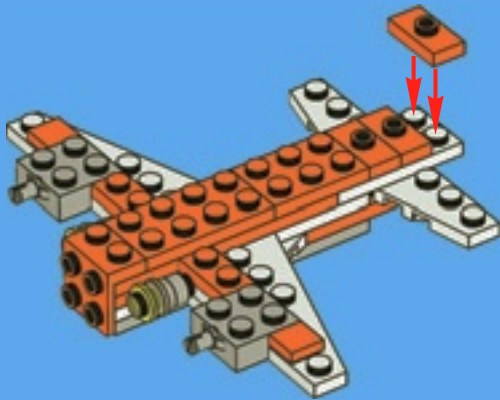 

9

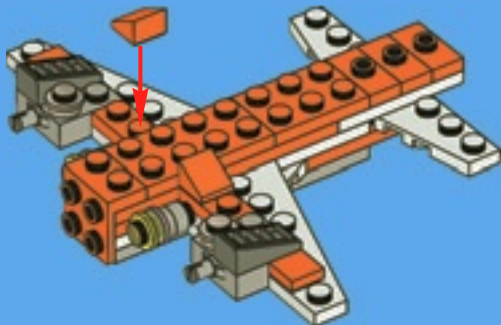 

10

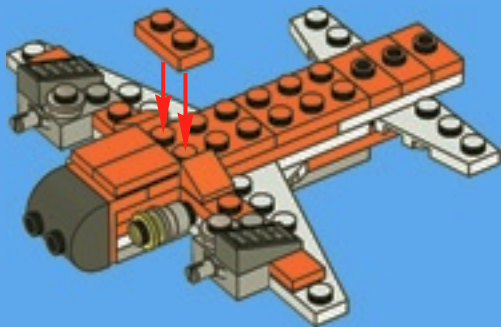 

11

 


12





1

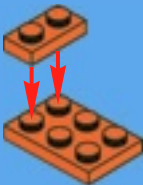

2



 
3




4




5

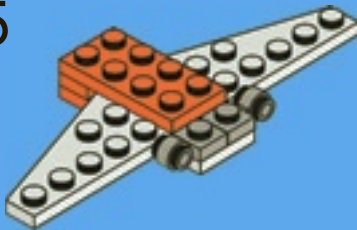


6

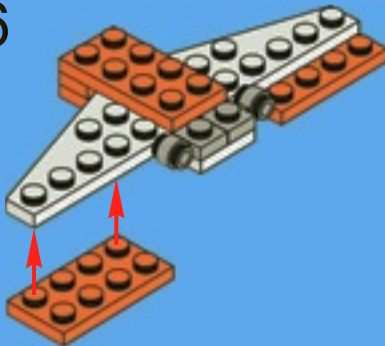 


7

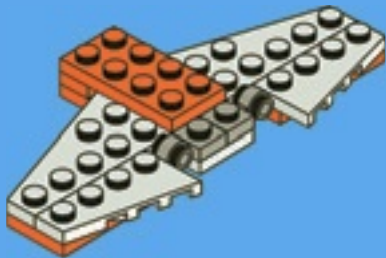 

8

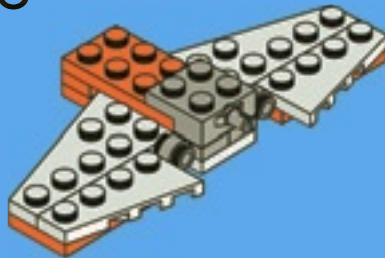 

9

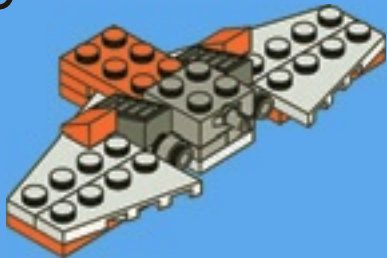 

1

 


2




2x


10

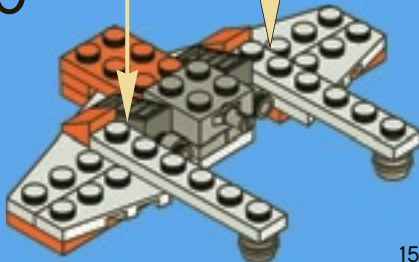

11

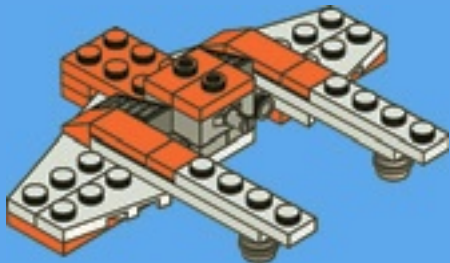 


12

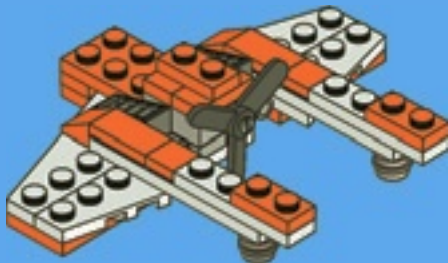 

13




 14

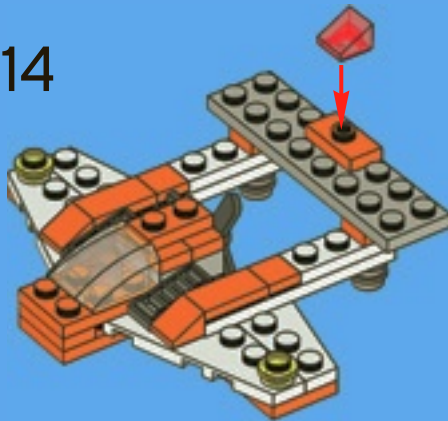



1

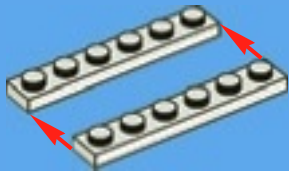 

2



3



1



2



 
4



5



6

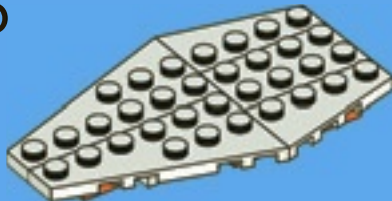

7

 


8




20


9

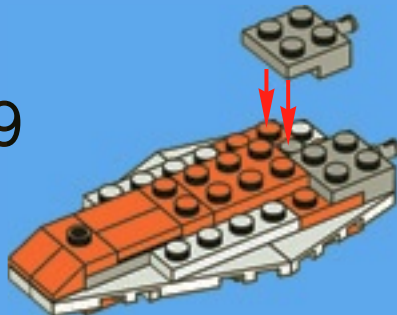


10

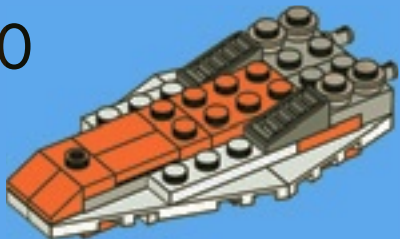 

11

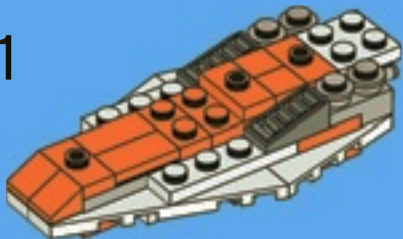 

12

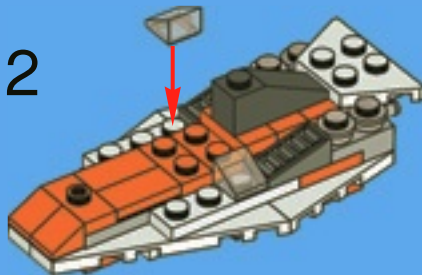 

13



22



1x
4160857



1x
4161326



2x
371001



1x
302001



2x
366601



1x
4249506



1x
302201



1x
4287708



1x
4287707



1x
4200023



1x
428626



2x
4289255



1x
4244363



2x
3005744



4x
4249039



2x
4540386



4x
4177932



2x
4504371



1x
4217722



2x
4188771



2x
4558595



1x
4226179



1x
4125278



2x
4211477



2x
4244368



3x
4158355



2x
4211496



3x
4547035



1x
4550011



1x
4173332



1x
4211406



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

www.lego.com/service or dial



     : 00800 5346 5555

  : 1-800-422-5346



CREATOR

5766



 www.LEGO.com

©2011 The LEGO Group. 4623045 / 4623046

