



Taste	TA201	TA202	TA203	TA204	TA205	TA206	TA207	TA208	TA209	TA210
Belegung	1	2	3	4	5	6	7	8	9	0
Taste	TA211	TA212	TA213	TA214	TA215	TA216	TA217	TA218	TA219	TA220
Belegung	↑	→	↓	←	OK	Menü	C	un- scharf	int. scharf	ext. scharf

Bild 11: Schaltung der Tastatur-/Relaisplatine, oben rechts die Schaltung der LED-Platine