



AS0808 User manual

Product description

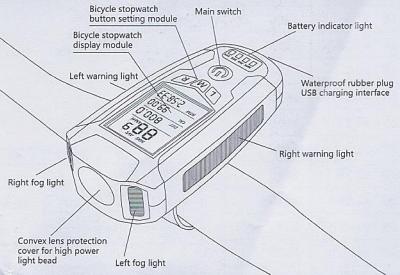

Parts list/Four optional types

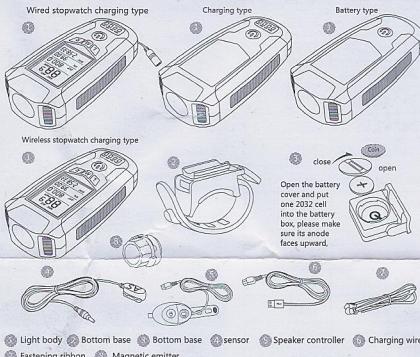

Wired stopwatch charging type
Light + bottom base + speaker controller + wired sensor + magnetic emitter + fastening ribbon + charging wire

Wireless stopwatch charging type
Light + bottom base + speaker controller + wireless sensor + magnetic emitter + fastening ribbon + charging wire

Charging type
Light + bottom base + speaker controller + charging wire

Battery type
Light + bottom base + speaker controller

Installation Instructions

Clip installation figure




Light bandage installation figure




Wireless stopwatch signal interface connection scheme



Cable fixation: arrange cable along the front fork, then use some fastening ribbons to fasten, the cable for handlebar must be entwined onto it and fixed with fastening ribbons so as not to hinder handlebar movement.

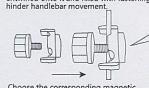

Choose the corresponding magnetic sensor, then fix the magnetic sensor to the wheel, make sure the diameter of beam inside the wheel, install the emitter and make it the same distance from the sensor, then rotate and tighten up, then adjust the distance between the magnet and sensor to 1.5mm after figure 2 and 2 for details.

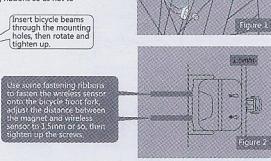

Product Characteristics

Utilize German quality standard and anti-dazzle convex lens similar to responsible dipped headlight, thereby not dazzling drivers and road passengers and drivers and ensuring personal security. Match with 2 highlight ambient fog lights, having strong penetrability, being able to light up the front roads even in foggy or rainy days. 1000 lumens output on both sides, enabling high visibility of drivers and passengers around, making the passengers and coming bicycle can see each other from a long distance, thereby having the warning effect. Built-in 1200mA battery with fender function, anti over charging and discharging, having high safety performance, working time about 3.5-6.5 hours. Split switch design, upper part controlling light modes, bottom part controlling speaker volume, enabling more convenient operation. 4 built-in LED indicator lights, having high accuracy, making you get to know the real-time battery and enjoy a carefree trip. Smart anti-theft alarming mode, being triggered by vibration, being able to prevent and intimidate stealer. 130 high decibel deafening sound, 5 speaker modes optional and suitable surely for you; 5 lighting modes, 300 lumens output, lighting up the road to your home.

Stopwatch function descriptions

Max speed (Max riding speed)
Average speed (Average riding speed 0.0-9.9)
Speed limit (Max speed)
Single trip mileage (single riding mileage)
Riding time (single riding time)
Total mileage (total riding mileage)
Calories (heat consumed 0.0-999999.9 kilocalories)
LCD night light (long press M button for 3 seconds to turn on, always press again to turn it off)
Fat (fat consumed)
Temperature (ambient temperature)
Stopwatch

Time mode (12H/24H)
High-lighting time information inhibited if no signal for 5 minutes, only time and lime symbol displayed)
Km/Miles (kilometer/mile setting)
Maintenance reminder function (Maintenance reminder function)
Low-battery reminder function (flashing reminder if voltage lower than 2.5V)
Tire pressure setting
Total mileage setting
Total riding time initial setting
Riding data sampling function
Weather forecast optional
Chinese/English)

How to reset the parameters

Press L and R buttons at the same time for more than 3 seconds to set various parameters (mileage, unit, weight, maintenance value)

Setting procedure:

- Enter Mileage unit setting, the unit is kilometer by default, use R button to switch between kilometer and mile, use M button to confirm.
- Enter the circumference setting, value being 260 by default (2600m is the tire circumference), the numbers are displayed, then set from left to right, use R button to change the numbers and M button to confirm.
- Enter weight setting, confirm its unit first, weight being 665 by default, the character K becomes flashing (K is unit of kilogram), press R button to switch to L (L stands for pound, 65 kilograms equal to 143 pounds), press M button to set from left to right, use R button to change the numbers and M button to confirm.
- Enter tire pressure setting, value being 200 by default, press R button to switch among 4 values 200, 400, 600 and 800, use R button to change, the initial setting is already finished.

If intending to restore to resetting, long press L and R buttons for 3 seconds to enter resetting, the operation procedures are the same as the aforementioned.

Mode Descriptions

Total mileage mode

This mode displays average speed, total mileage, unit, weight, maintenance value.

● How to set total mileage zero clearing

Press L button to make the total mileage character flash, long press R button for more than 3 seconds, then set from left to right, use R button to set and M button to confirm. The setting range is 0-999999.9, zero clearing will happen automatically if exceeding the range.

● How to set temperature unit

Press L button to make the total mileage character flash, then long press R button once again to trigger temperature flashing, long press R button for more than 3 seconds to make "Centigrade" or "Fahrenheit" appear, then press R button again to change the unit from Centigrade to Fahrenheit, use M button to confirm.

● How to switch to stopwatch

In the total mileage mode, press R button to switch to stopwatch, press R button to turn off. Press L button to pause, press R button to clear and restart, press R button to switch from stopwatch to time mode.

Single trip mode

This mode displays max speed, single trip, calories, riding time.

How to switch calories and fat

Press R button, calorie or fat functions will switch to each other automatically

How to zero clear all data

Long press R button for more than 3 seconds, max speed, single trip, calories, riding time will be zero clear automatically.

Speed (current riding speed)

Speed can be shown when riding, the topmost speed character flashes with the accuracy of 0.1 kilometers per hour, the speed unit is kilometers per hour or miles per hour, 0.00-99.9 miles per hour, if not in riding status, the screen shows the max speed or average speed.

LCD nightlight

In 24H time mode, set after 17:00-07:00, press any button, the back light will turn on for 4-5 seconds, long press M button for more than 3 seconds under any time setting, the back light will be on always, also long press M button for more than 3 seconds to turn off the back light.

Cancellation of distance symbol

When the riding distance exceeds the set maintenance mileage value, the maintenance mileage character will flash, long press R button for more than 3 seconds to cancel the reminder.

Power-saving mode

After long press R button or button pressing after 5 seconds, the hibernation mode will start, only time and lime symbol are displayed.

Low-battery reminder function

When the battery voltage is lower than 2.5V, the battery symbol will flash to remind that the battery needs to be replaced or charged.

Wheel specification

Circumference (mm)


16 " x1.5 "	1206
16 " x1.95 "	1253
16 " x2.0 "	1257
20 " x1.25 "	1450
20 " x1.35 "	1460
20 " x1.5 "	1490
20 " x1.75 "	1515
20 " x1.95 "	1565
20 " x1-1/8 "	1545
20 " x1-3/8 "	1615
20 " x1-1/4 "	1618
22 " x1-3/8 "	1770
22 " x1-1/2 "	1785
24 " x1(520) "	1753
24 " x3/4 " tubular	1785
24 " x1-1/8 "	1795
24 " x1-75 "	1890
24 " x1-1/4 "	1905
24 " x1.9 / 1.95 "	1916
24 " x2.0 "	1925
24 " x2.125 "	1965
26 " x1.0 "	1913
26 " x1.25 "	1953
26 " x1.5 "	1985
26 " x1.75 "	2035
26 " xL9 / 1.95 "	2055
26 " x2.0 "	2074
26 " x2.1 "	2095
26 " x2.25 "	2115
26 " x2.3 "	2135
27 " x1-1/8 "	2155
27 " x1-1/4 "	2161
29 " x2.1 "	2288
29 " x2.2 "	2298
29 " x2.3 "	2326
650cx20mm	1945
650cx23mm	1990
700c tubular	2130
700cx20mm	2074
700cx23mm	2105
700cx25mm	2124
700cx28mm	2136
700cx30mm	2145
700cx32mm	2155
700cx35mm	2168
700cx38mm	2180

Wired stopwatch/wireless stopwatch parameters

Mode AS0808	
Size	101.5(x)49.5(W)x24.5(H)
Led	XPG-COB + 2835X2 PCS
Main light	Fog light, 300 lumens/30 lumens
Battery	1200mAh polymer lithium battery (with fender)
Charging cycles	5 times
Sound mode	5 types
Sound decibel	130db
Material	ABS
Charging time	About 2.5 hours
Waterproofing grade	4 (anti-drizzle)
Battery indicator light brightness	100%~75%~50%~25%

Mode	Lumen	Battery time	Mode
Gear one	300	4.5h	
Gear two	30	6.5h	
Gear three	100	6h	2.5h
Gear four	300	3.5h	
Gear five	100	5.5h	

Speaker with 5 sounds

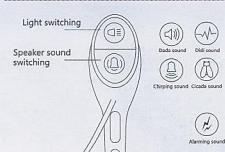

How to install speaker wire
There is a USB charging hole and a speaker wire connector hole at the tail part of bicycle light.
How to switch among speaker sound modes
Long press the speaker switch for over 2 seconds.

How to initiate smart and theft alarming mode

Long press the main button for over 3 seconds, you will hear the did sound 4 times, 5 seconds later, if the bicycle is subject to some extent of vibration, it will initiate the alarming sound for 15 seconds, if it is being vibrated again, it will respond with the second kind of alarming sound long press the main switch to turn off the alarming sound function.

Charging description

Micro USB charging is applied, it also supports cell phone power supply adapter, vehicle-mounted USB interface, computer USB port and portable power bank. When you need to open the power supply, pull the power plug at its tail, connect with the charging wire, the charging is fully done for all the 4 battery indicator lights are on.

Notes for light usage


Please don't irradiate eyes.
Don't look it in water.
Avoid hand impact.
It is recommended to charge once a month if not using for a long time.
Keep it from children contact.
Please don't place this product near fire or high heat source.
Please shut down the power supply if not using.
Please don't disassemble if not being professionals.

Please don't disassemble if not being professionals


Failure	Failure causes
Speed indicator always being zero	Incorrect distance or angle between magnetic emitter and sensor
Speed indicator always being zero when riding	Incorrect parameter setting (bicycle wheel circumference)
Screen blackout	Ton long exposure to strong sunlight, it will restore to normal if put in shadowy or dark area for a period.

AS0808用户手册

产品解析

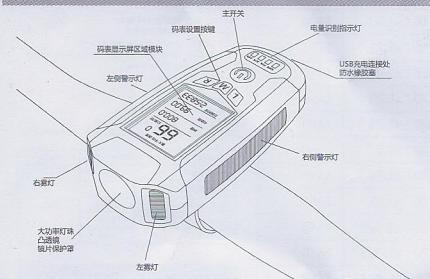

零件清单/四款供选择

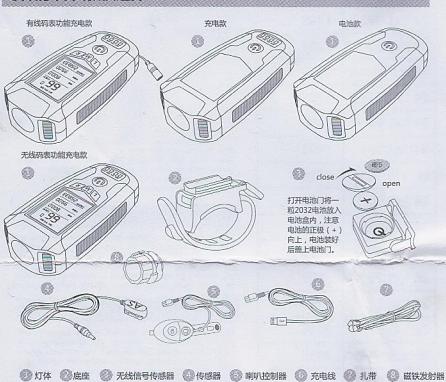

① 有线码表功能充电款 ② 充电款 ③ 电池款
④ 无线码表功能充电款 ⑤ 灯+底座+磁铁发射器+无线传感器 ⑥ 磁铁发射器+扎带+充电线

安装方法


卡扣安装图 灯带安装图



有线码表信号端口连接图



电线的固定：沿前叉布线并用附件中的扎带固定，车把上的电线必须缠绕在车把上并用扎带固定，以便不妨碍你的活动。

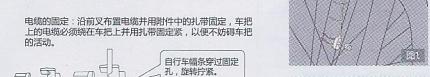

模塑车轮的轴条细长，选择相应的磁铁尺寸，将发夹与固定孔安装在同一侧，旋转拧紧，调整铁和传感器的位置为1.5mm，如参考图1、图2。

产品特点

参考数据表明，前方光速通常情况下，汽车行驶的速度，不适合驾驶员的人和驾驶员造成一定的磨损，保障人身安全。搭配智能识别颜色，具有导航功能，在行驶需要下雨，雷天照明前方道路。

内置1200毫安锂电池，方便充电，安全性能好，使用寿命长，可达3.5-6.5小时。
分离式开关设计，下方的喇叭声开关操作更便捷。

四向倒车雷达，能准确，实时掌握倒车状况，出行无忧。

智能碰撞预警系统，危险驾驶，防止追尾，避免碰撞。

130分贝警报，震憾音效，五种待机模式，总有一种适合你。五项灯光模式，300流明输出，照亮你回家的道路。

码表功能说明	中计 (124/241)
平均速度 (单位每小时)	0.00-99.9
速度 (公里每小时)	Km/Mile (公里 / 英里)
单次里程 (驱驶行驶里程)	保养里程 (驾驶里程)
行驶时间 (每次行驶时间)	加油距离 (距离)
总里程 (总行驶里程)	低电量提醒 (电压低于 2.5V 闪烁提醒)
平均油耗 (消耗的油量)	轮胎磨损显示
LCO (行驶里程)	怠速行驶距离
胎压 (轮胎的压力)	累计行驶时间 (时间)
温度 (周围环境温度)	行车数据 (样样功能)
秒表	可选有线 / 无线
	中文 / 英文

如何进行参数重设

同时按住 L 和 R 键 3 秒以上，可对各项参数（里程、单位、轮胎、体重、保养值）进行设置

设置说明：

- 进入里程模式设置，默认为公里，R 键设置选择公里 / 英里，M 键确认。
- 进入设置里程时间模式，默认为 2060 (2060 是意思里程为 2060 米)，数字处于闪烁状态，从左到右依次按键设置，R 键交差设置，M 键确认。
- 进入设置单位模式，输入单位为公里，M 键确认，输入英里，M 键确认。
- 进入保养里程模式，输入为 065，字母 K 键是为公升单位，按 R 键可以切换 L/L 为英里单位，65 公升 (14.3 升)。按 M 键设置，从左到右依次按键设置，R 键交差设置，M 键确认。

长按 L 和 R 键 3 秒后回到重新设置状态，操作步骤和上方描述一致。

模式说明

在总里程模式下

该模式不会显示平均速度，总里程，温度，时钟，秒表

● 如何设置总里程

按 L 键，此时该字符会闪动，再按 R 键 3 秒以上，从左到右依次设置，R 键交差设置，设置范围 (0.00-99999.9)，给出后自动保存。

● 如何设置温度单位

按 L 键，此时该字符会闪动，再按 R 键一下，触发温度闪烁，然后长按 R 键三秒以上，进入温度闪烁状态。再按 R 键，将单位摄氏度转换为华氏度，按 M 键确认。

● 如何设置时钟

按 L 键，按住 R 键字符不变，长按 R 键，按住 L 键 24/72/2，再按 R 键切换好，在按 L 键进行分钟的设置，再按 R 键进行秒数的设置，按 M 键确认。

● 如何启动秒表功能

在总里程模式下，按 L 键进入秒表模式，按 L 键开启秒表，如果要暂停按 L 键，暂停时按 M 键 L，秒表重新开始，秒表启动的可以按 R 键启动秒表的计时。

在单程模式下

该模式下会显示最大速度，单程，卡路里，骑行时间

如何切换卡路里和骑行时间

按 R 键，此时卡路里或者骑行功会自动切换成功

如何清除所有数据

常按 L 键 3 秒以上，最大速度，单程，卡路里，骑行时间自动清零。

速度 (当前行驶速度)

只有在行驶时，才会显示速度，是上分的速度字符会闪动，精度为 0.1 公里 / 小时，速度范围显示 (0.00-99.9 公里 / 小时) 或者 (0.00-9.9 英里 / 小时)，不行时屏幕显示最大速度或者平均速度字符。

LCD 显示

在行驶状态下设置成 24 小时制的 17:00-00:00，按住 R 键，当行驶 4.5 小时，按住 R 键 3 秒以上，熄光亮光，如果要灭灯光，也是 R 键 M 键 3 秒以上。

保持信号的取消

当运动距离超过保养里程设置时，保养里程符号 闪烁，闪烁时按 R 键，停止时按 M 键。

省电模式

5 分钟后无信号输入或者不按任何键进入休眠状态，仅显示时钟和时钟符号 (低电提示功能)

当检测到电池电压低于 2.5V 时，电池符号会闪动显示，提醒此时需要更换电池或者进行充电。

车轮规格

周长 (mm)

16" x1.5"	1206
16" x1.95"	1253
16" x2.0"	1257
20" x1.25"	1450
20" x1.35"	1460

有线码表/无线码表参数

显示器：10.1 英寸 (1920x1080) 分辨率 XGA (1280x800)

尺寸：10.1 英寸 (25.6 厘米) 宽 x 17.8 厘米高 x 1.5 厘米深

重量：约 1.2 公斤 (2.65 磅)

处理器：高通骁龙 410 四核处理器

内存：1GB RAM + 8GB ROM

电池：1200 毫安聚合物锂电池 (带保护板)

充电次数：500 次

声音提示：五种

声乐提示：10 种

材料：ABS+GRPS

充气时间：约 2.5 小时

防爆等级：IPX4 (防水)

电量指示灯亮度：100%: 55%: 50%: 25%

模式

流氓 / 续航时间 / 模式

模式	流氓	续航时间	模式
第一档	300	4.5 小时	
第二档	30	6.5 小时	
第三档	100	6 小时	2.5 小时
第四档	300	3.5 小时	
第五档	100	5 小时	

喇叭五种声音



如何使用录像功能
录像部分有一个 USB 接口，此时连接接线接口。
如何选择喇叭声模式
长按喇叭开关 2 秒以上。

如何开启智能防盗报警模式

长按开关 3 秒以上，会听到滴滴滴滴声，五秒之后，当车子行驶一公里后启动，滴滴白点亮，启动后长按开关，持续按 15 秒，当再次听到会发出两种警报声，如需要关闭功能，长按开关才能取关！

充电说明

采用 MICRO-USB 接口，支持手机电话连接充电。车载 USB 接口，电源适配器：充电宝，电源适配器连接外部的电源线，连接到电源线，当显示指示灯变红时表示充满，表示充电完成。

使用车灯须知

请勿长时间照明
避免强光直射
避免强光直射
长期不用建议每个月充一次电
避免儿童接触
请勿靠近易燃品或高温热源附近
不要让儿童接触
非专业人员请勿拆卸

码表报快故障及其原因

故障	故障原因
行驶时计时	磁铁发射器与传感器距离不正确
始终为 0	或者角度安装不正确
速度显示	设置的参数不正确
不正确	(自行车的车轮长)
显示器黑屏	暴晒时间过长，放置在阴暗处一段时间后恢复正常